

BRISTAN


Installation Instructions & User Guide

Please leave these instructions with the end user

Product Code: VAL2 BIB C 6 CD (D1)

Specifications

Inlet Water Temperature


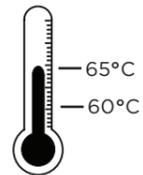


60-65°C Recommended

Dynamic Water Pressure

Min: 0.2 bar

Max: 5.0 bar

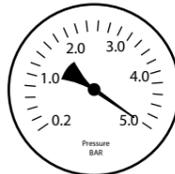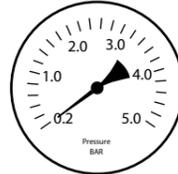

Maximum Static Pressure: 10.0 bar

Inlet Connections



1/2" BSP

Tools You'll Need




Flat Head Screwdriver



Crosshead Screwdriver



Adjustable Spanner

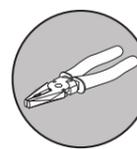

Long-Nosed Pliers



Pipe Cutter



Drill



Pencil



Safety Goggles

Prior to Installation

All products manufactured and supplied by Bristan are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions.

This product has been tested to the Water Regulations Advisory Scheme (WRAS) and satisfies the requirements of the Water Supply (Water Fittings) Regulations 1999 and current bylaws. For full Installation Requirements & Notes (IRN) please visit wras.co.uk/directory.

We recommend isolation valves to be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing these taps the water supply must be thoroughly flushed in order to remove any swarf, solder etc.

This product must not be modified in any way as this will invalidate the guarantee.


If power tools are used do not forget to:

- Wear eye protection
- Unplug equipment after use

If in doubt, contact a registered plumber or your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows:-

The Institute of Plumbing,
64 Station Lane,
Hornchurch,
Essex,
RM12 6NB, Tel: 01708 472791

Pack Contents

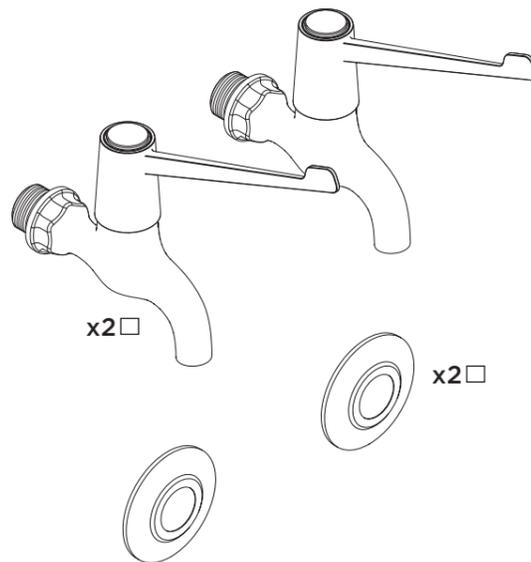

x2

x2

Spare Parts


To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.



Installation

1

Create the rear access point in the back of the wall cavity.

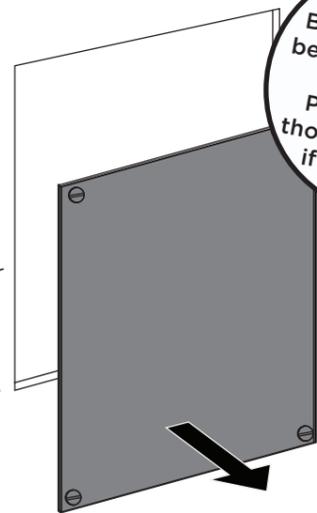

IMPORTANT
Bib taps can also be fitted to X US C and BTE C. Please refer to those instructions if being used.


2

Identify the required position of the taps and prepare the water supply pipes.

Mark and drill holes. Finish the wall surface.


REMEMBER
Hot on the left, cold on the right!

3

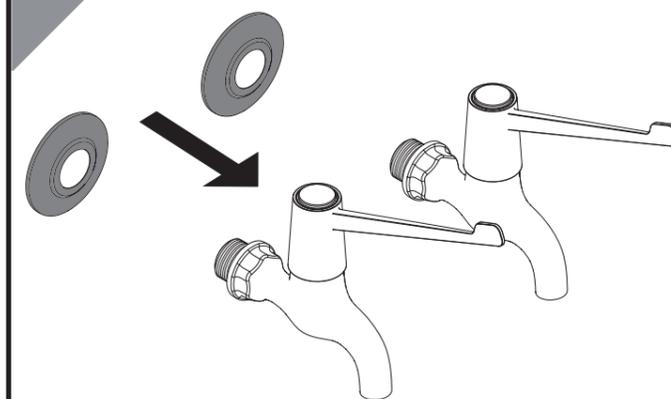


Screw the shrouds on to the tap bodies.

4

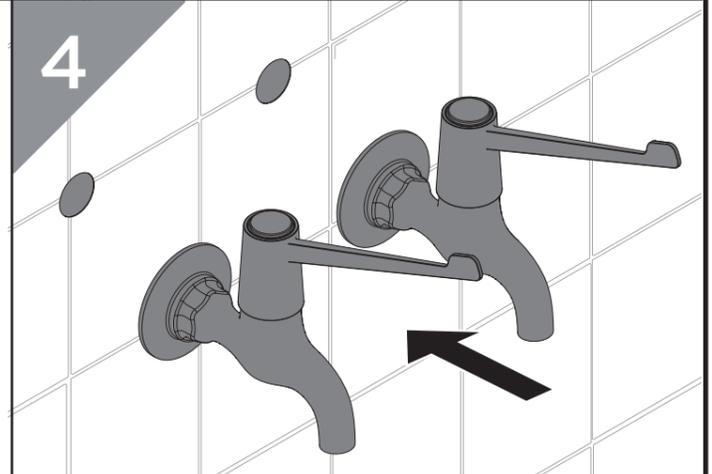

Feed the tap bodies through the wall.

5

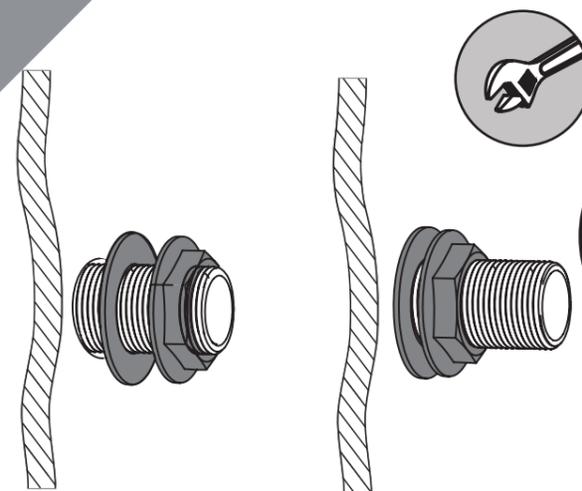



Secure the taps by using washers and metal backnuts behind the wall (not supplied).

6

Connect the hot and cold water supplies to the threaded tails. We recommend using elbows (not supplied). Turn on water supply.

IMPORTANT
Turn on water supply for a few minutes and check all joints and connections for any leaks.

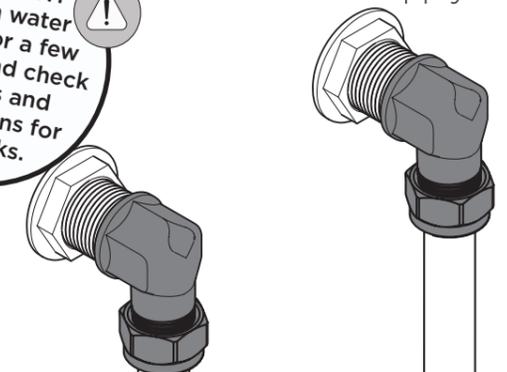

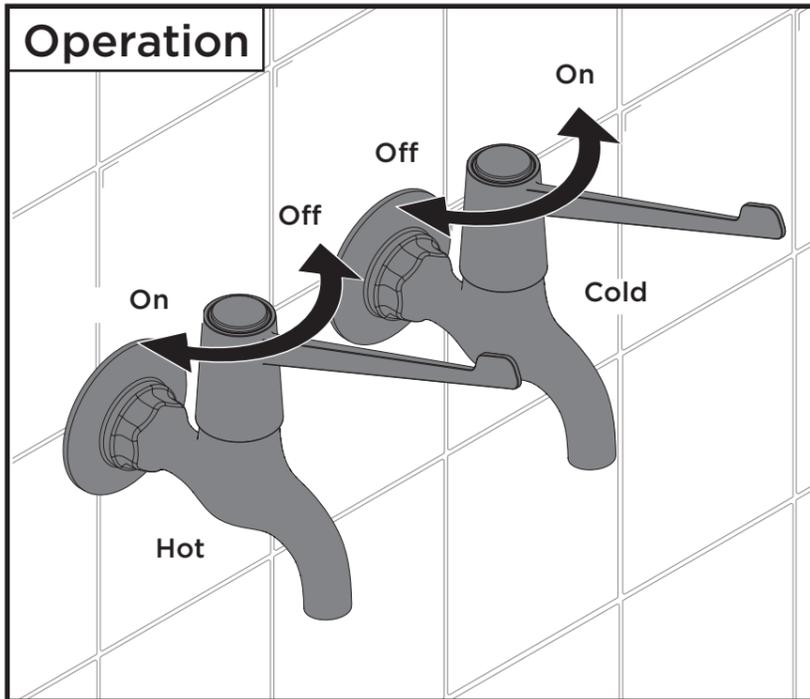

General Cleaning

Bristan products are made from premium materials, with hand polishing and electroplated finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.

Maintenance - Clean/Replace Outlet

1

Using long-nosed pliers, unscrew gently to remove the outlet.

2

Screw back into the tap body to replace the outlet.

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

Maintenance - Valve Cleaning

1

Prise off the caps and indices. Undo the screws to remove the handles.

2

Unscrew the valve using an adjustable spanner.

Check any seals and O-rings for damage. Replace valve if necessary.

3

Place valves in a suitable solution and soak until fully de-scaled.

4

Reverse the steps to replace the valves and handles.

Troubleshooting

Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

Love Your Chrome

Bristan offers an effective chrome-friendly cleaning kit for use with your taps and showers. Scan the QR Code or search for 'CLEAN KIT01' on www.bristan.com.

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register to register your product via a computer.

For full guarantee terms and conditions visit www.bristan.com/guarantees.