

BRISTAN


Installation Instructions & User Guide

Please leave these instructions
with the end user

Product Code: CE SNK C (D1.1)

Specifications

Inlet Water Temperature


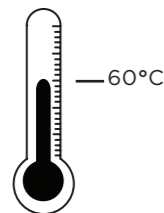


Maximum 60°C Recommended

Dynamic Water Pressure


Min: 0.2 bar

Max: 5.0 bar

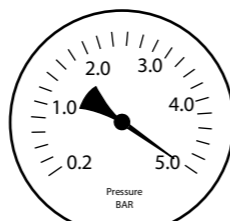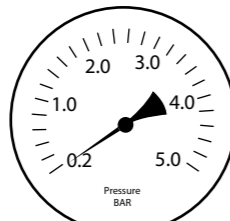

Maximum Static Pressure: 10.0 bar

Inlet Connections

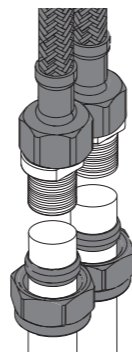

1/2" BSP
Flexible Tails

* Connection
adaptors not
included


Tools You'll Need




Flat Head
Screwdriver



Crosshead
Screwdriver

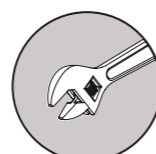

Adjustable
Spanner

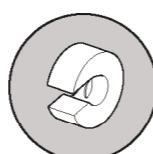

Pipe Cutter

Prior to Installation

All products manufactured and supplied by Bristan are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions.

This product has been tested to the Water Regulations Advisory Scheme (WRAS) and satisfies the requirements of the Water Supply (Water Fittings) Regulations 1999 and current bylaws. For full Installation Requirements & Notes (IRN) please visit wwwras.co.uk/directory.


We recommend isolation valves to be fitted to the inlet water supplies to ensure ease of future maintenance. Before installing these taps the water supply must be thoroughly flushed in order to remove any swarf, solder etc. This product must not be modified in any way as this will invalidate the guarantee.

Full access must be made available for future maintenance/servicing purposes.

If in doubt, contact a registered plumber or your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows:-

The Institute of Plumbing,
64 Station Lane,
Hornchurch,
Essex,
RM12 6NB, Tel: 01708 472791

Pack Contents

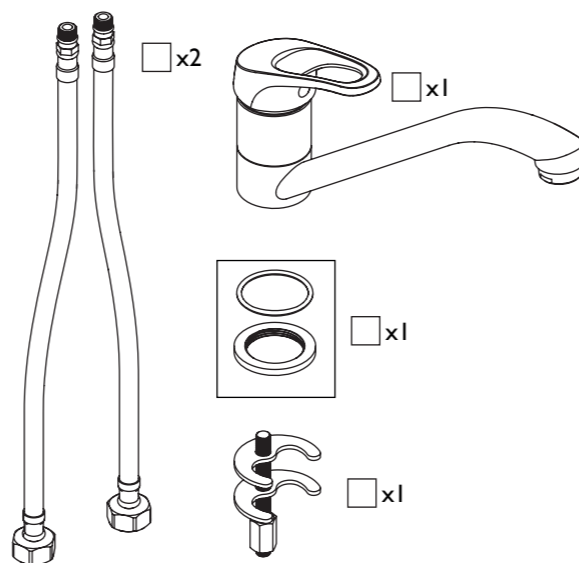



Spare Parts

To replace any spare parts
for your tap, why not
scan the QR Code or
visit www.bristan.com
and search for your product.




Installation

1

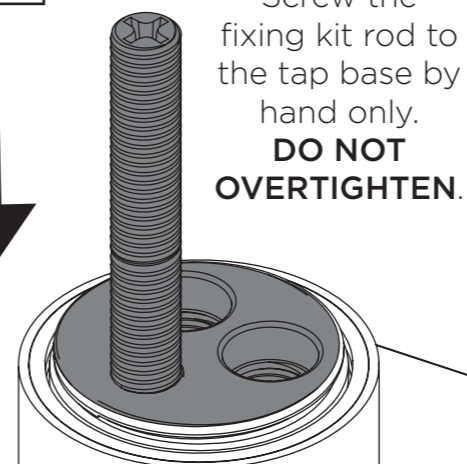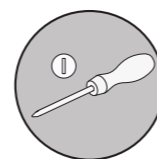

Screw the
fixing kit rod to
the tap base by
hand only.
**DO NOT
OVERTIGHTEN.**


2

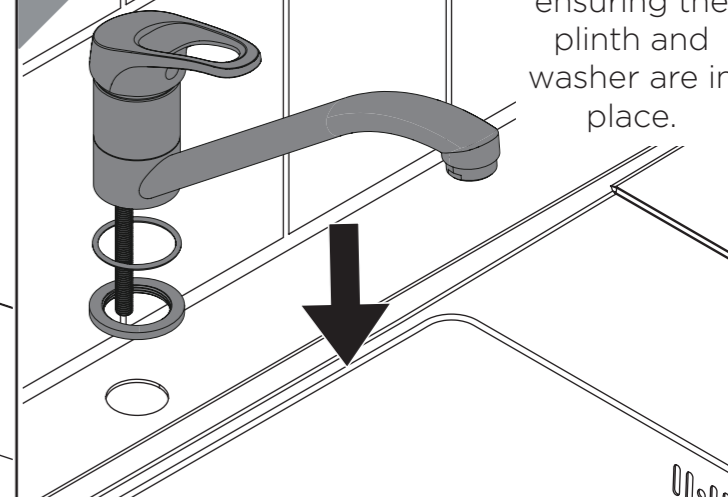

Feed the tap
body through
the tap hole,
ensuring the
plinth and
washer are in
place.

3


Secure the tap body using
the fixing kit.

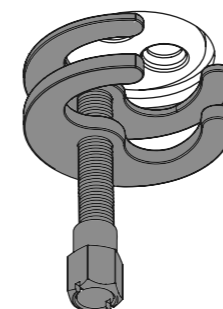

4



Screw the
flexible tails to
the tap base by
hand only.
**DO NOT
OVERTIGHTEN.**



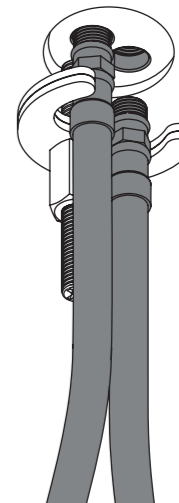


5



Connect the flexible tails
to the hot and cold
water supplies.

We would recommend
that you install flat-faced
isolation valves to the
water supplies for safety
and maintenance
purposes

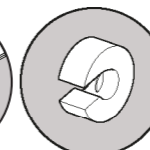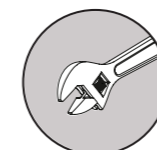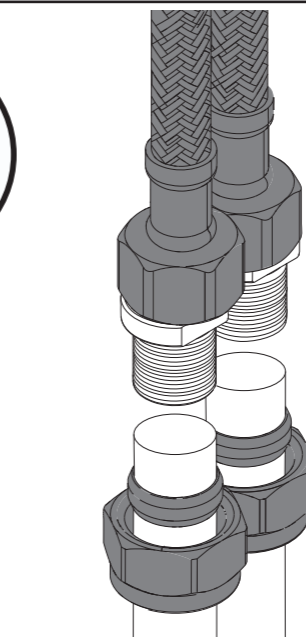


6



Turn on the water supply. Check all joints
and connections for any leaks.

Operation

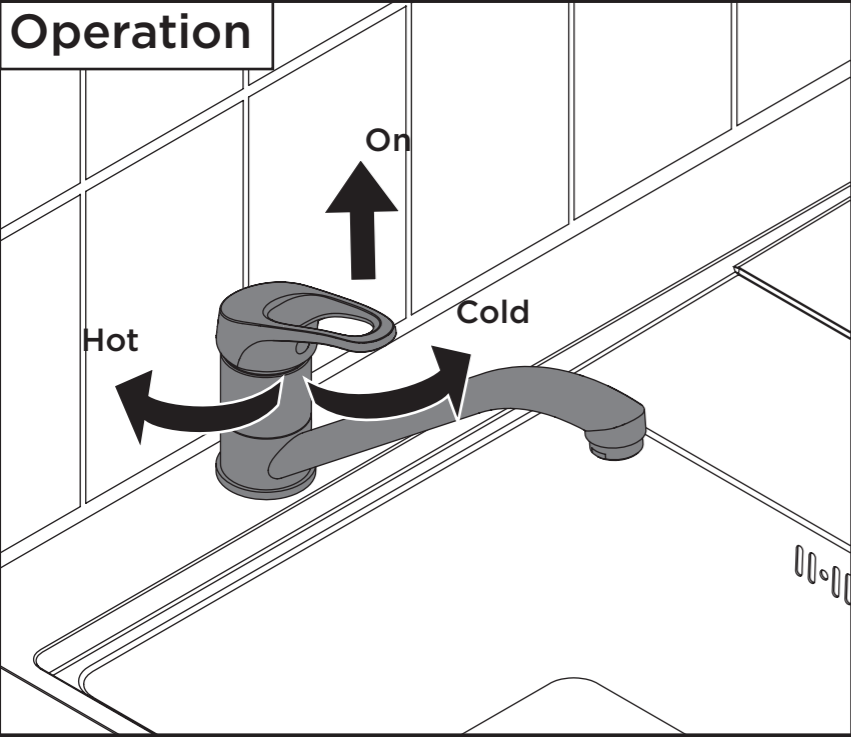

General Cleaning

Bristan products are made from premium materials, with hand polishing and electroplated finishes.


Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.


Maintenance - Clean/Replace Outlet

1




Remove the outlet using a suitable spanner.

2

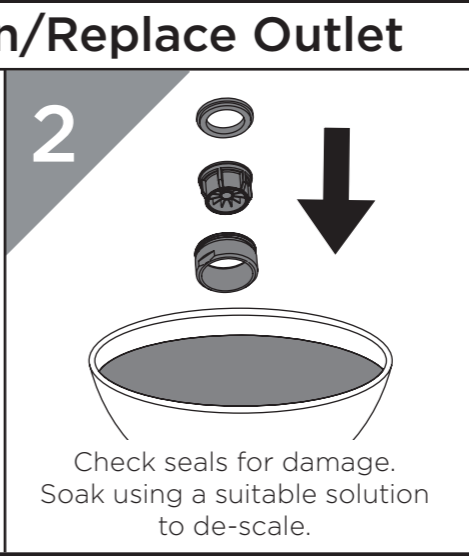

Check seals for damage. Soak using a suitable solution to de-scale.


3

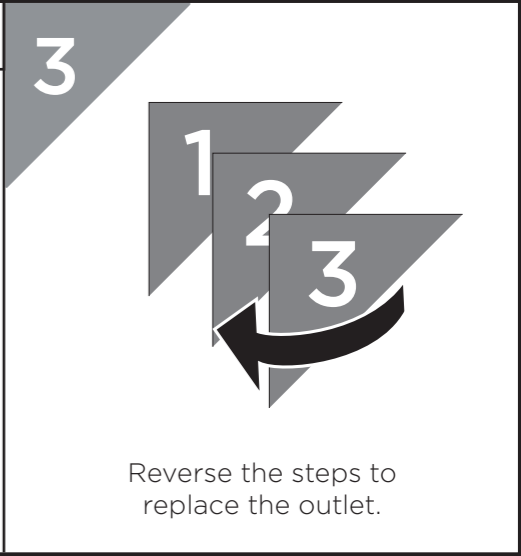

Reverse the steps to replace the outlet.

Maintenance - Valve Cleaning


1

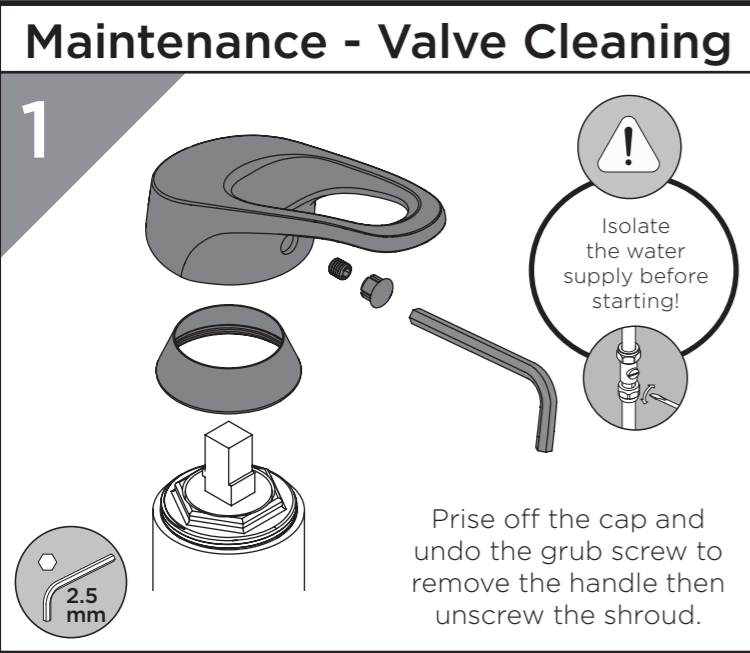

Isolate the water supply before starting!


Prise off the cap and undo the grub screw to remove the handle then unscrew the shroud.

2

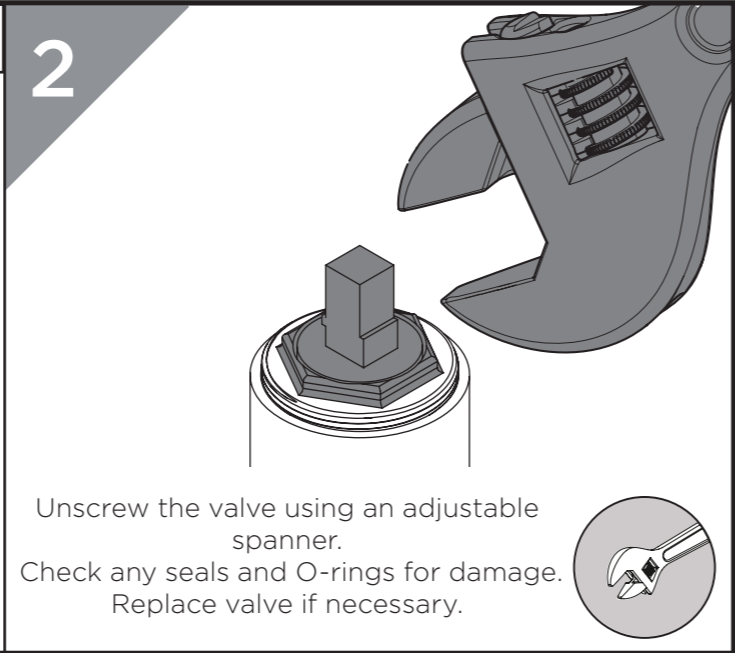


Unscrew the valve using an adjustable spanner. Check any seals and O-rings for damage. Replace valve if necessary.

3

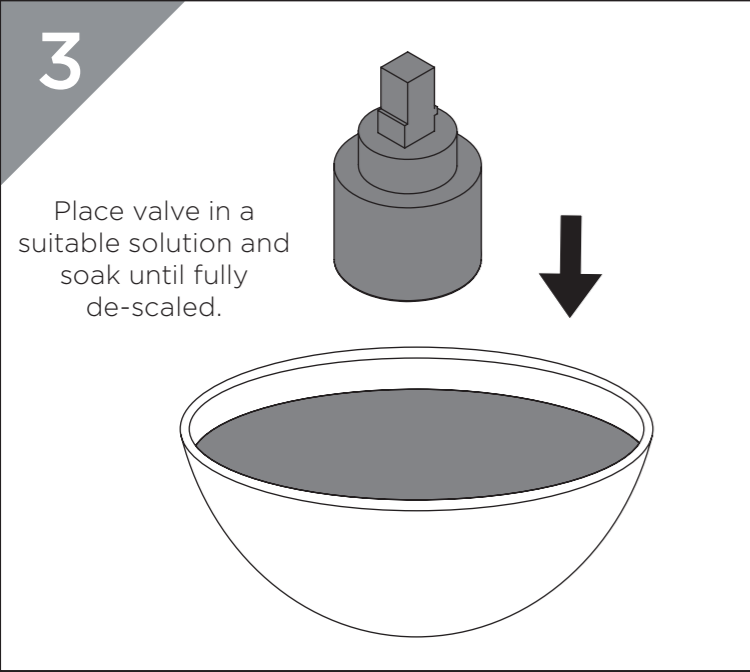

Place valve in a suitable solution and soak until fully de-scaled.

4

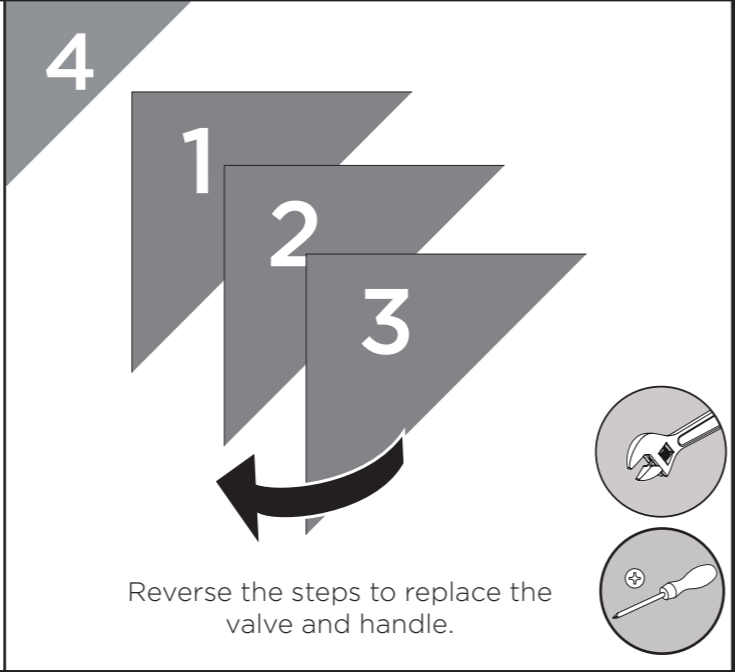

Reverse the steps to replace the valve and handle.

Troubleshooting		
Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind. To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register to register your product via a computer. For full guarantee terms and conditions visit www.bristan.com/guarantees.



We Know & We Care