

BRISTAN

Installation Instructions & User Guide

Please leave these instructions
with the end user

COB 1/2 Range (D7)

Specifications


Dynamic Water Pressure

Min: 0.2 bar Max: 5.0 bar




Maximum Static Pressure: 10.0 bar

Inlet Water Temperature

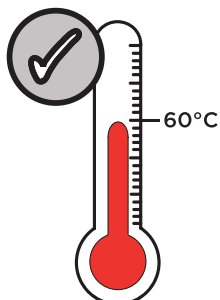


Maximum Hot 60°C

Inlet Connections

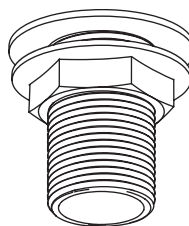


1/2" BSP

Outlet Connections

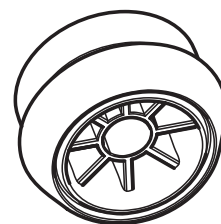


M18 Fixed
Flow Straightener

Pack Contents

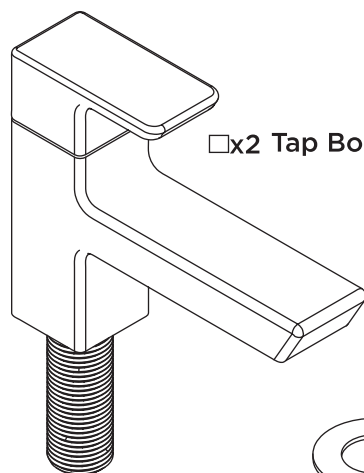

□x2 Tap Bodies


□x2 Plinths

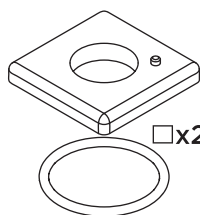

□x2 Seals




 □x2
Rubber Washers



□x2
Metal Backnuts

Operation

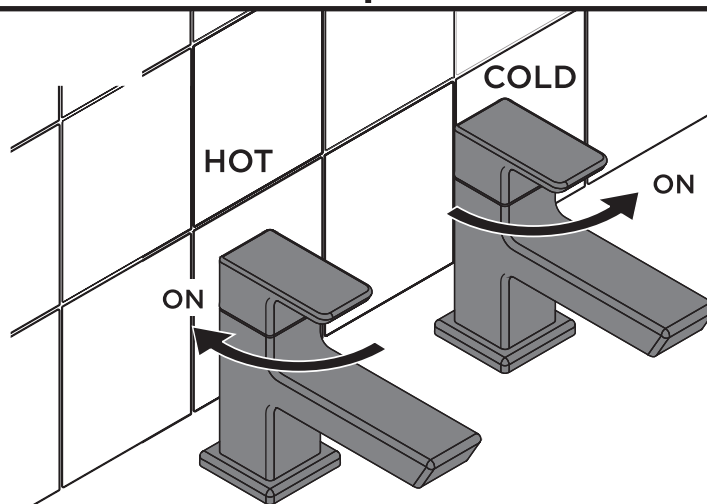

Tools Required for Installation/ Maintenance




Box Spanner
(Backnut)




Socket
Spanner
(Valves)




Adjustable
Spanner

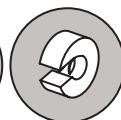

Pipe
Cutters

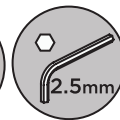

Hexagonal
Key

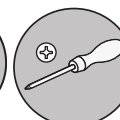

Crosshead
Screwdriver

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014. For full Installation Requirements & Notes (IRN) please visit www.wrasapprovals.co.uk/approvals-directory

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

This product must not be modified in any way as this will invalidate the guarantee.

Spare Parts



To replace any spare parts
for your tap, why not
scan the QR Code or
visit www.bristan.com
and search for your
product.



IMPORTANT

Images shown are for illustrative purposes only.


The tap you have purchased may look different to those pictured in these instructions, but will follow the same installation steps.

Your contents page will be specific to your product.

If you find your product or any of its components differ from those shown on the contents page, please contact our Customer Support on - 0330 026 6273

Installation


1

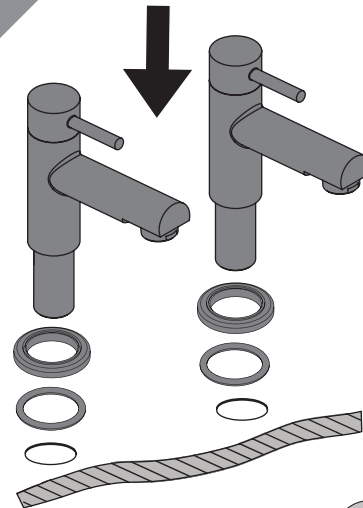

Feed the tap body through the bath/basin and ensure plinth and plinth seals are in place.

Your taps may come with plinths and will either be included pre-attached or loose in the box


1*

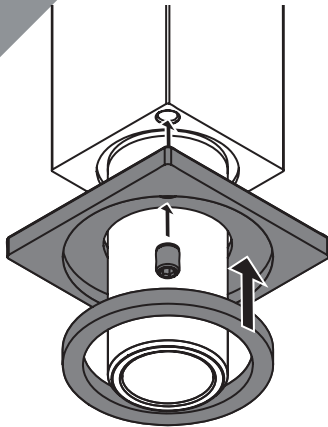


You may be required to secure the plinth to the tap with a grub screw.

If the hole is not directly visible on the plinth, check underneath rubber seal


Ensure rubber seal is in place once plinth is attached

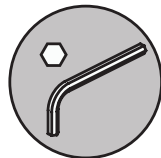

2


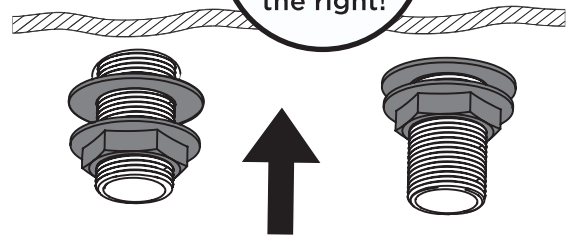


REMEMBER
Hot on the left, cold on the right!

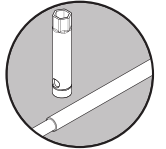

Secure the taps to the basin/bath by using the washer and metal backnut below the basin/bath.


3

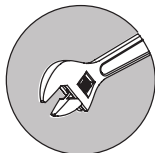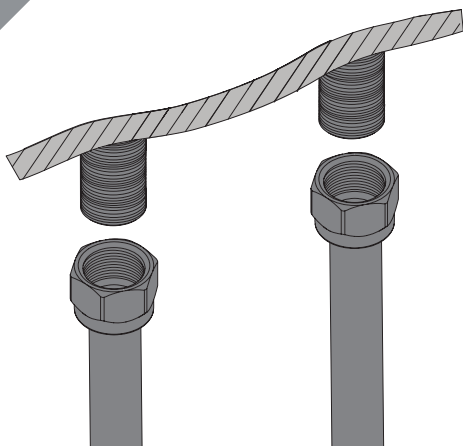

4


Hot

Cold

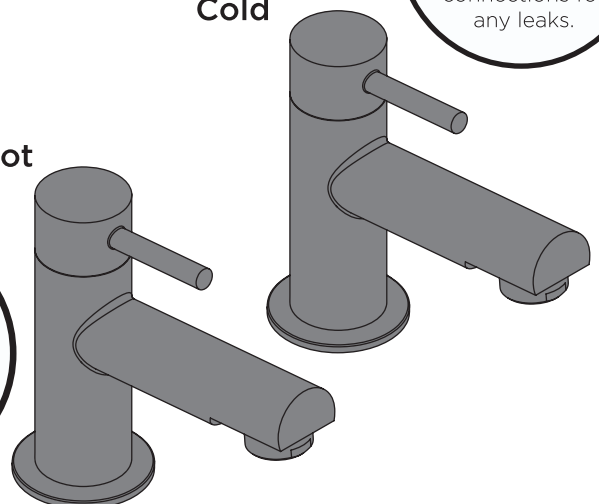

IMPORTANT
Turn on water supply for a few minutes and check all joints and connections for any leaks.

 REMEMBER
To fit isolation valves for maintenance purposes




Connect the hot and cold water supplies to the threaded tails.

Maintenance - Valve Replacement



PLEASE NOTE - Taps shown in these instructions are for illustration purposes only.
All taps can be maintained using these instructions.

1

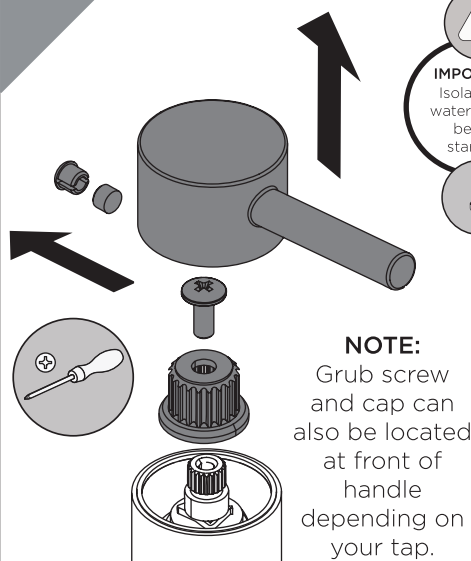



NOTE:
Grub screw and cap can also be located at front of handle depending on your tap.



IMPORTANT
Isolate the water supply before starting!





Remove the handles depending on the style of your tap, including any spline adaptors if used.

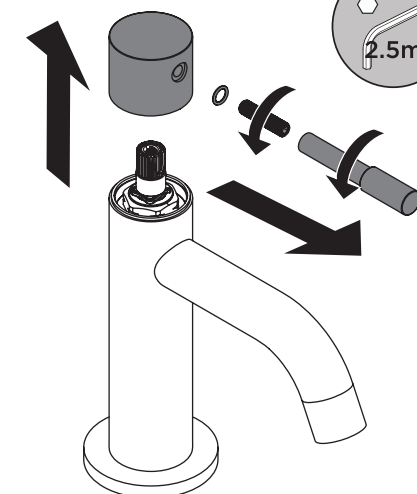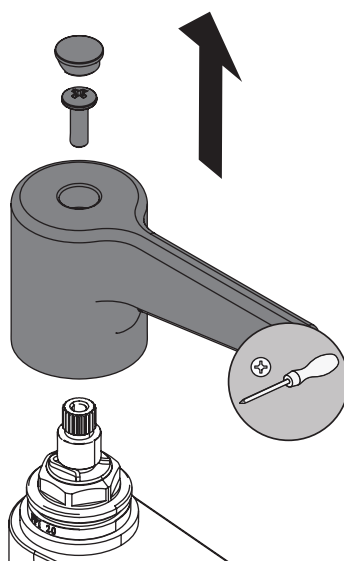

Unscrew peg lever by hand, then remove the threaded rod with hex key.


2

Remove the valve using the tool required for your tap. Check any seals and O-rings for damage. Replace valve if necessary.

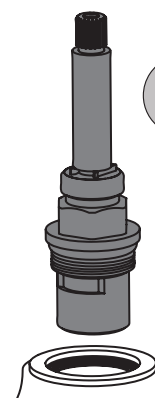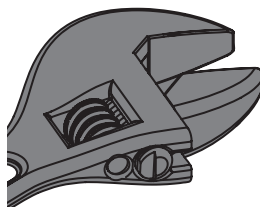


Take care when removing/replacing your long stemmed valve, as the finish could be damaged or scratched.

3

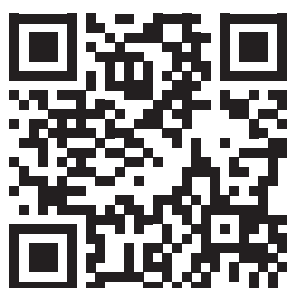

Visit www.bristan.com or scan the QR Code and search for your product code to replace the cartridge for your tap.

4

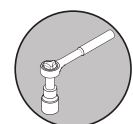

Reverse the steps to replace the valves and handles.

Maintenance - Clean/Replace Outlet





PLEASE NOTE - Taps shown in these instructions are for illustration purposes only. All Taps can be maintained using these instructions.

1a

Housed Outlet




Using an adjustable spanner, unscrew gently to remove the outlet

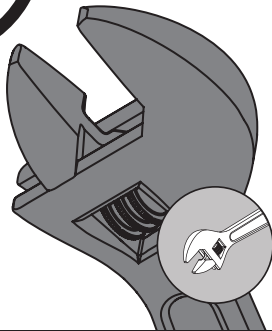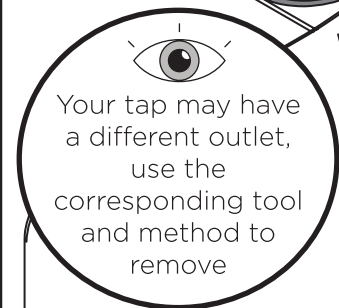

1b

Recessed Outlet

 

If provided, insert the key tool into the outlet and twist to release it.

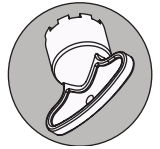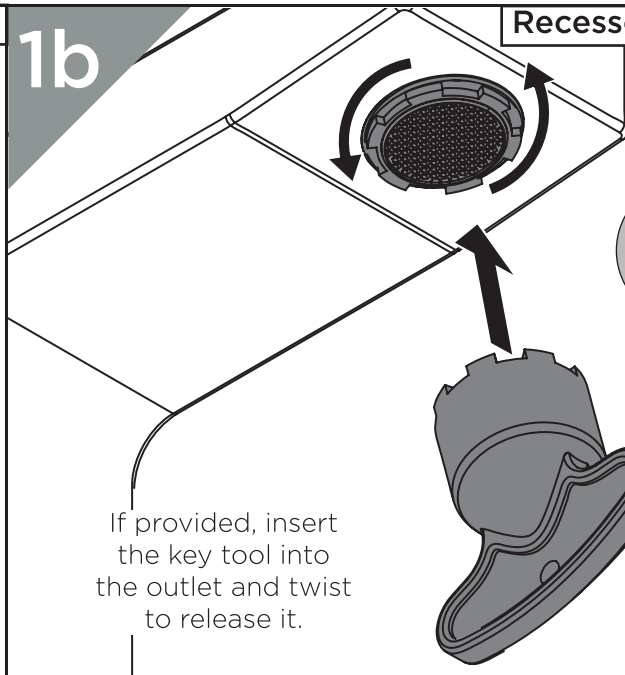

1c

Coin Slot Outlet


Using a coin, insert into the slot on the outlet. Twist to release it.

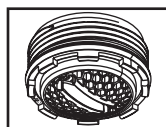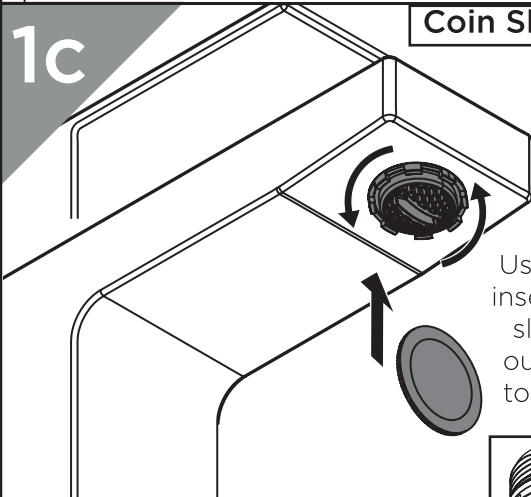

1d

Fixed Outlet


Using long-nosed pliers, unscrew gently to remove the outlet.

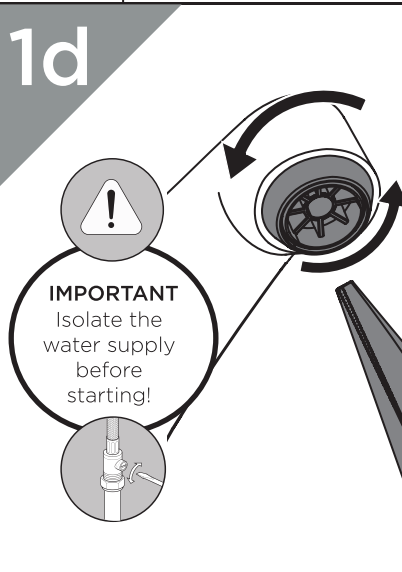


IMPORTANT
Isolate the water supply before starting!



2

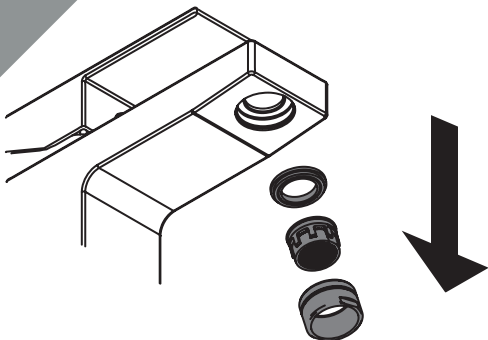

Check all loose parts for any damage, then soak using a suitable solution to de-scale

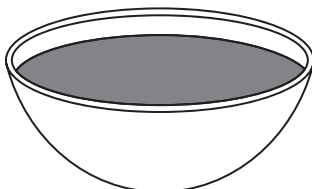

3



Reverse the steps to replace the outlet

Troubleshooting		
Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves.	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

General Cleaning	Contact Us	BRISTAN
Bristan products are made from premium materials, with hand polished, electroplated, PVD or EPD finishes. Your taps should be regularly cleaned with warm water, a mild pH-neutral liquid soap and polished with a soft cloth. Any residues from soap, toothpaste etc. can cause blemishes if not rinsed off straight after use. Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.	Bristan Group Ltd. A Masco Company UK: Bristan Group, Pooley Hall Drive, Birch Coppice Business Park, Dordon, Tamworth B78 1SG. EU: Masco Europe S.à.r.l. 14 Rue Strachen 6933 Mensdorf Luxembourg Email Us: enquire@bristan.com Website: www.bristan.com Call Us: +44330 026 6273 A Masco Company	Part of BRISTAN GROUP

Our Guarantee	
At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind. Your guarantee starts from the purchase of your product, but you can still benefit from registering it for easier identification in the unlikely event of a manufacturing fault, please visit www.bristan.com/register For any other queries, please call Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice. For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees	