


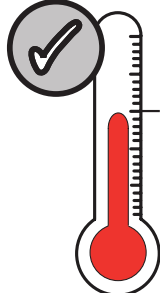
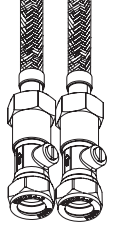

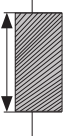
BRISTAN

Installation Instructions & User Guide

Please leave these instructions
with the end user



MZ SNK EF Range (D7)

Specifications



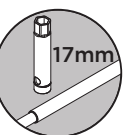

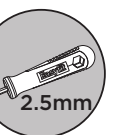

| | | | |
|---|---|--|--|
| Dynamic Water Pressure Min: 0.3 bar Max: 5.0 bar  Maximum Static Pressure: 10.0 bar | Inlet Water Temperature  Maximum Hot 60°C | Inlet Connections 1/2" BSP Flexible Tails with Isolation Valves  (non-return valves included) | Outlet Housed M22 Female Aerator  Max Worktop Depth  35mm |
|---|---|--|--|

Pack Contents

Operation
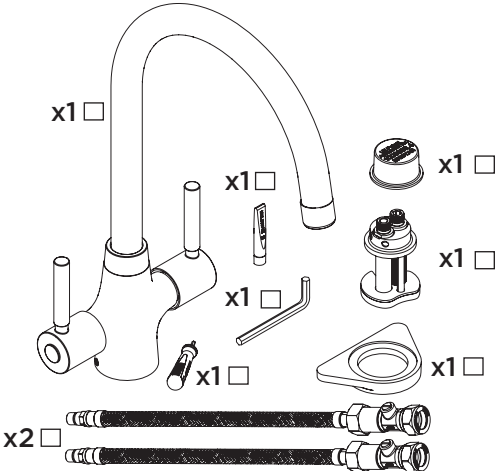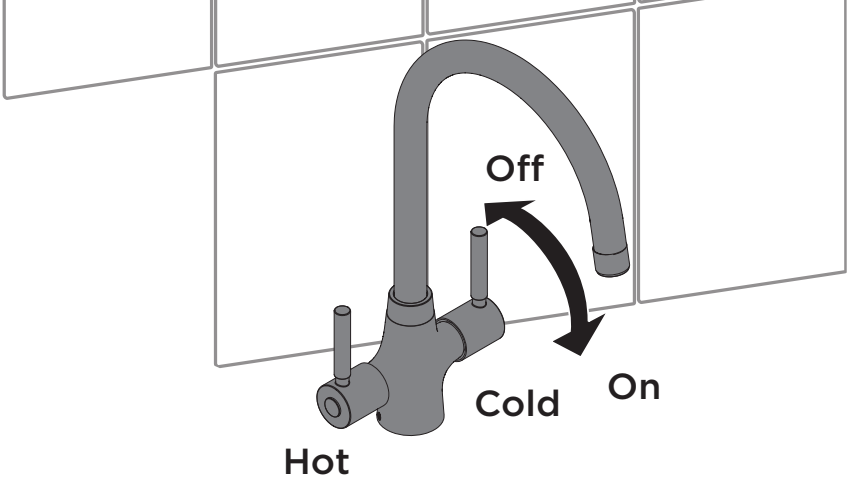
| | |
|--|---|
|  |  |
|--|---|

Flexible Connecting Pipes
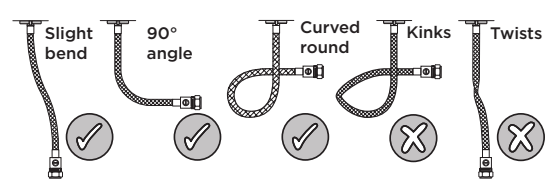
| | | | | | |
|--|--|--|---|--|---|
|  |  Adjustable Spanner |  Box Spanner (Valves) |  Hexagonal Keys (Base) |  EasyFit Tool |  Crosshead Screwdriver |
|--|--|--|---|--|---|

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014. For full Installation Requirements & Notes (IRN) please visit www.wrasapprovals.co.uk/approvals-directory

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.



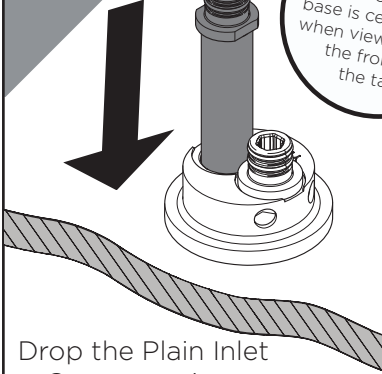
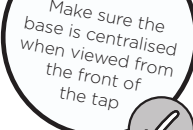




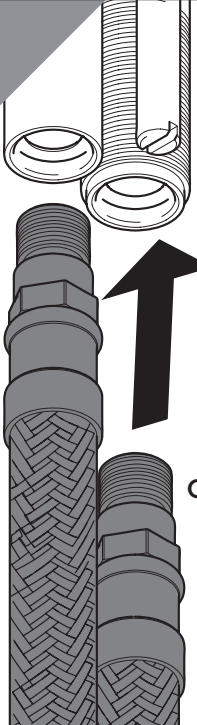

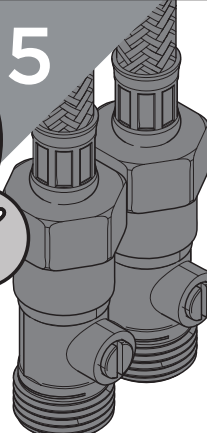
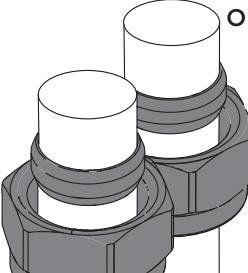

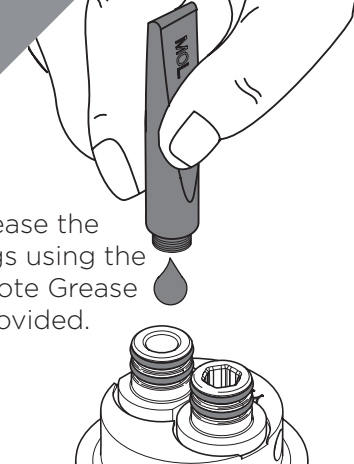
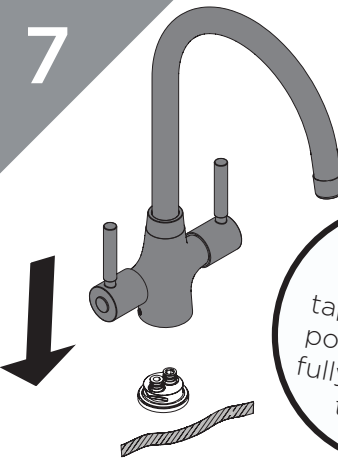

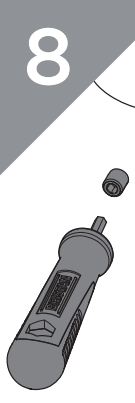
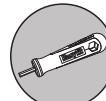
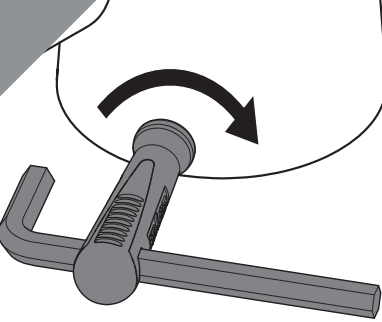

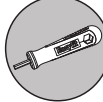
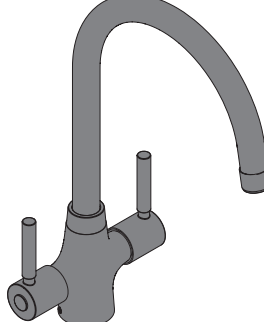
This product must not be modified in any way as this will invalidate the guarantee.

Spare Parts



To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.

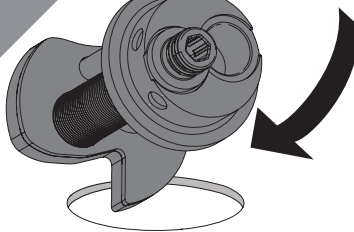Installation
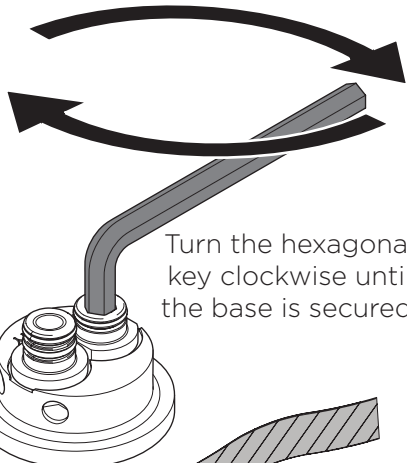
| | |
|--|--|
| <div>1</div> <div></div> <div>Feed the base through the sink hole from the top.</div> <div></div> <div>8mm</div> <div>If the surface the tap is being fitted to is over 8mm; or you feel the tap needs extra stability, follow the alternative installation steps overleaf.</div> | <div><div>2</div><div></div><div>Drop the Plain Inlet Connector into the base.</div><div></div><div>Make sure the base is centralised when viewed from the front of the tap.</div><div></div><div>Ensure the straight edges of the plain inlet connector sit flush on the base, next to threaded inlet connector.</div><div></div><div>X</div></div> |
| <div>3</div> <div></div> <div>Turn the hexagonal key clockwise until the base is secured.</div> <div></div> <div>6.0 mm</div> | <div><div>4</div><div></div><div>Screw the flexible tails into the base.</div><div></div><div>DO NOT OVER-TIGHTEN</div></div> <div><div>5</div><div></div><div>Connect the hot and cold water connections.</div><div></div><div>Olive</div><div>Compression Nut</div><div></div></div> |
| <div>6</div> <div></div> <div>Grease the O-Rings using the Molykote Grease provided.</div> | <div><div>7</div><div></div><div>Place your desired tap onto the base.</div><div></div><div>IMPORTANT Ensure the tap is correctly positioned and fully located on the base</div></div> <div><div>8</div><div></div><div>Secure in place with the grub screws using the tool provided.</div><div></div></div> |
| <div>9</div> <div></div> <div>Thread the hexagonal key through the EasyFit tool and tighten the grub screws with an extra 1/2 turn.</div> <div></div> <div>6.0 mm</div> <div></div> | <div>Your tap is now ready to use.</div> <div></div> |

General Cleaning

Bristan products are made from premium materials, with hand polished, PVD, EPD or electroplated finishes.


Your tap should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.


Maintenance - Replacing Valves

1

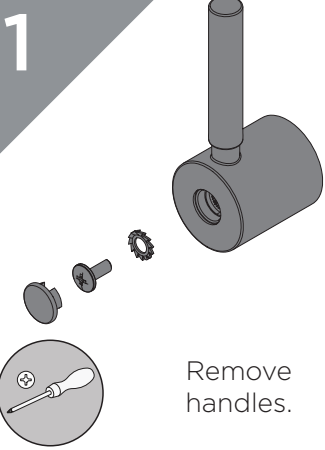


Remove handles.

2

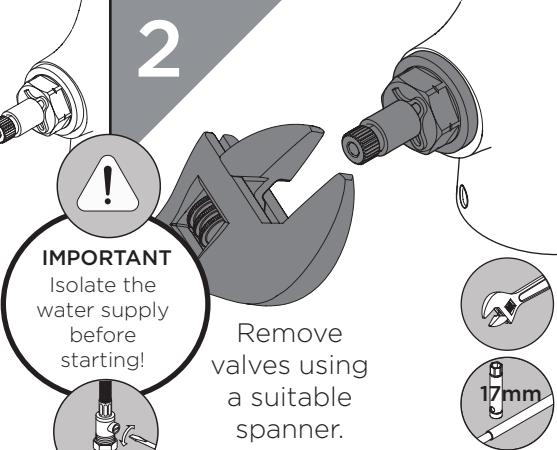


Remove valves using a suitable spanner.

3

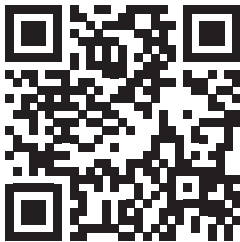

Visit www.bristan.com or scan the QR Code and search for your product code to replace the **valves/cartridge** for your tap.

4




Reverse the steps to replace the valves and handles.

Troubleshooting

| Symptom | Cause(s) | Remedy |
|--------------------------|---|---|
| No flow or low flow rate | Partially closed isolation valve. | Open isolation valve. |
| | Head of water is below the minimum distance required. | Refer to your the Specification for the minimum working pressure/distance required. |
| | Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes. | Do not use other water outlets when using the taps. |
| | Airlock or partial blockage in the supply pipework or hoses. | Flush through pipework to ensure removal of debris and any airlocks. |
| | Water supply failure | Investigate water supply. Check your plumbing and heating systems for any faults. |
| Water dripping from taps | This is normal for a short time after using the taps. | This is caused by residual water tension, the build up of water in the tap body. |
| | If water continues to drip, possibly due to the ceramic disc valves/cartridge | Refer to the Maintenance section to replace the valves/cartridge. |
| Taps do not turn on | Closed isolation valve. | Open isolation valve. |
| | Mains water supply turned off. | Turn on mains water supply. |
| Wobbly Tap | Grub screws are not tight enough at the base | Ensure the grub screws are fully tightened against the base |
| | Extra security may be required depending on the surface the tap is fitted on to. | Refer to the Alternative Installation steps in order to fit the Reinforcing Plate. |


Alternative Installation for Surfaces Out of Tolerance/Extra Stability

1

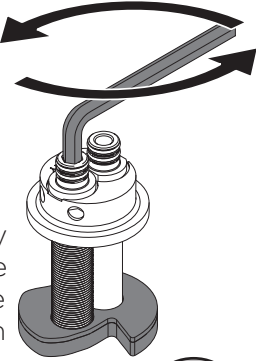


Turn the hexagonal key anti-clockwise to remove the back nut from the EasyFit Base.

2

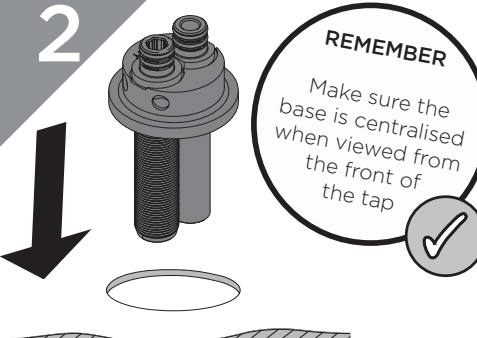


Feed the base through the sink hole from the top.

3

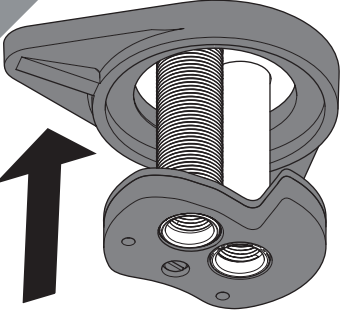


Feed the Reinforcing Plate (if required) and Back nut up to the underside of the sink.

4

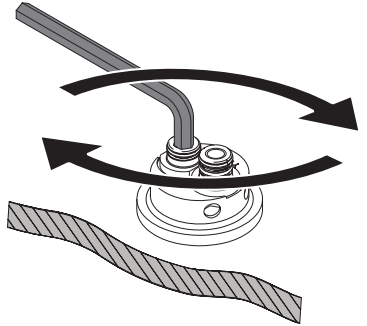

Turn the hexagonal key clockwise to secure the EasyFit Base.


5

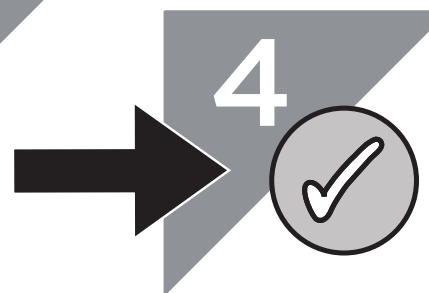

Proceed to Step 4 of the Installation Steps.


Maintenance - Cleaning/ Replacing Outlet

1

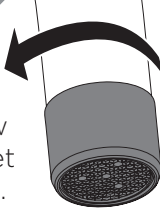


Unscrew the outlet housing.

2



Clean and replace as necessary.

3

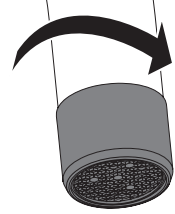

Secure the outlet. Turn on the mains water supply, letting the water flow for a few minutes to flush through the system.

Contact Us

Bristan Group Ltd.
A Masco Company

UK: Bristan Group, Pooley Hall Drive, Birch Coppice Business Park, Dordon, Tamworth B78 1SG.

EU: Masco Europe S.à.r.l. 14 Rue Strachen 6933 Mensdorf Luxembourg

Email Us: enquire@bristan.com
Website: www.bristan.com
Call Us: +44330 026 6273



Part of BRISTAN GROUP

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.

