

BRISTAN

Installation Instructions & User Guide

Please leave these instructions
with the end user

Product Code: AL ES TBAS Range (D2)

Specification


Dynamic Water Pressure

Min: 0.5 bar Max: 5.0 bar




Maximum Static Pressure: 10.0 bar

Inlet Water Temperature

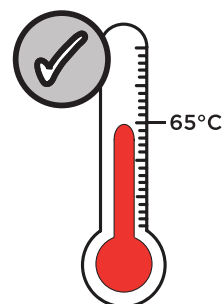


Maximum Hot: 65°C

Inlet Connections

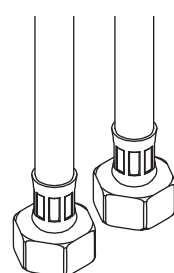


1/2" BSP Flexible Tails

Outlet

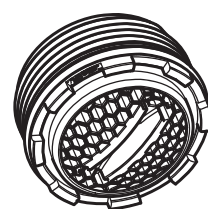


M18.5 5lpm
Coin-Slot Aerator


Pack Contents

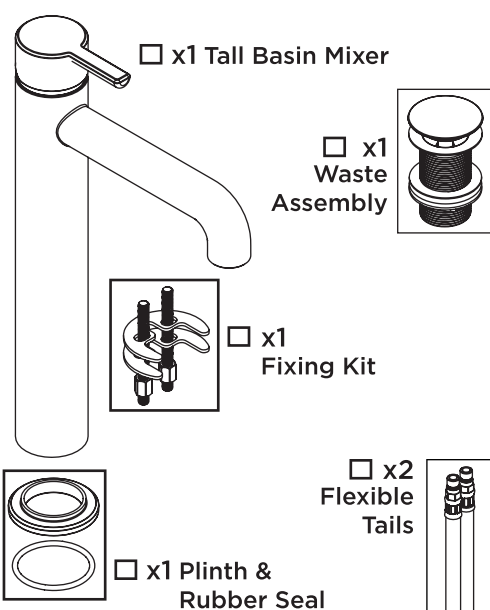

Operation

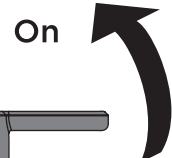

Hot

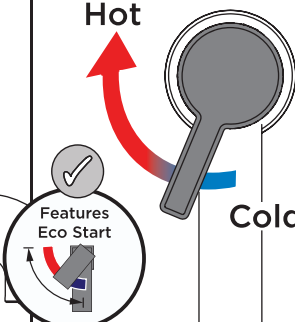


To increase
temperature,
turn the handle
to the left.

Cold

The handle will
cease to turn once
it is at a 90° angle,
supplying the max
temperature.

Tools Required

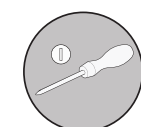


Flat Head
Screwdriver



Box
Spanner



Box
Spanner

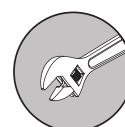

Adjustable
Spanner



Hex Key

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014. For full Installation Requirements & Notes (IRN) please visit www.wrasapprovals.co.uk/approvals-directory

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

This product must not be modified in any way as this will invalidate the guarantee.




PLEASE NOTE - Taps shown in these instructions are for illustration purposes only. Your product can be installed and maintained using these instructions.

Installation

1

Screw in the fixing
kit rods into the
base of the tap
and tighten with a
screwdriver.


Screw in the flexible
tails by hand only.
**DO NOT
OVERTIGHTEN**

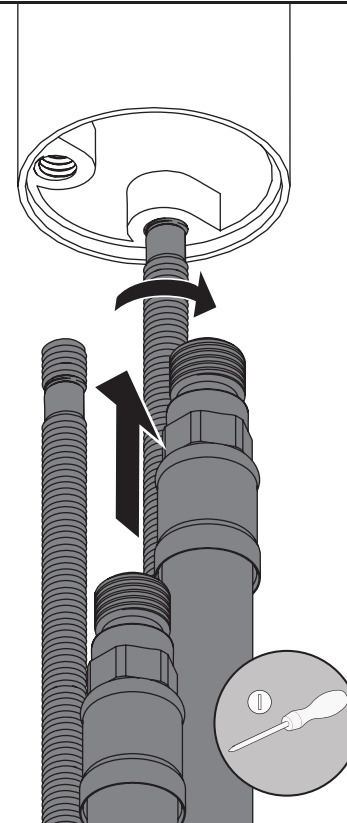

2

Thread the
tap and tails
through the
plinth ensuring
the rubber seal
is in place.


Continue to
thread through
the tap hole.

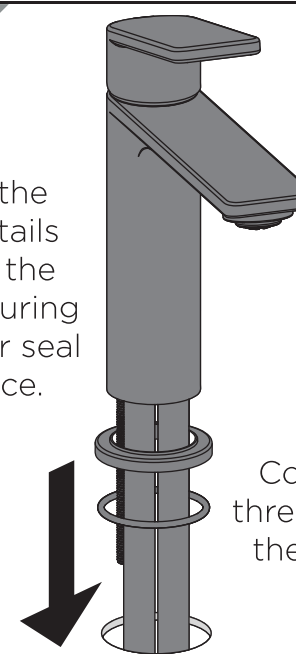

3

Slide the rubber
gasket and metal
clamp along the
fixing rods as
shown.



Align the gasket and
clamp with each
other and tighten
nuts to secure.

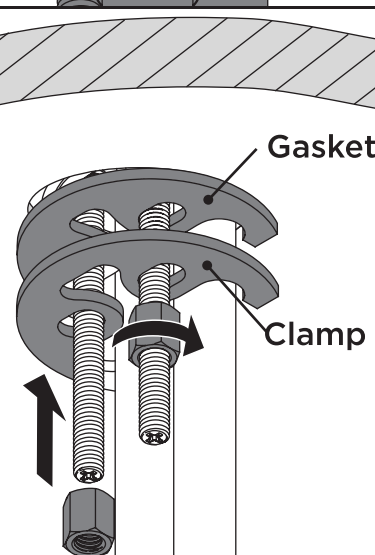

4

Flexible
Tail
Pipe Adaptor

Connect the hot and
cold water supplies
to the flexible tails
and turn until tight.

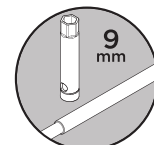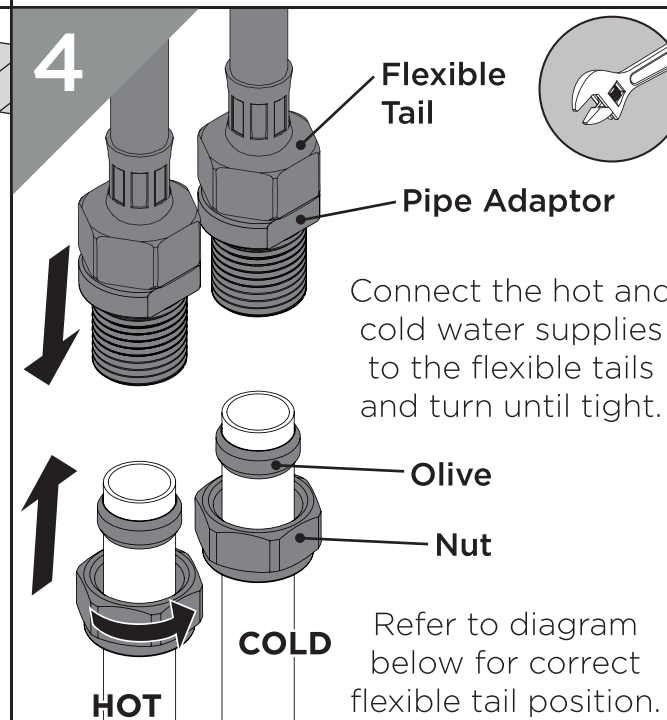


IMPORTANT
Turn on water
supply for a few
minutes and check
all joints and
connections for
any leaks.

5



Your tap is now ready
for use.

Ensure flexible tails are positioned correctly.

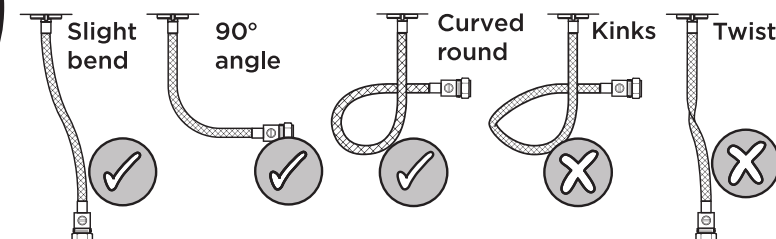


Cartridge Maintenance - Isolate water supply before starting!

1

Pry off the cap and remove the grub screw.


Unscrew the shroud.

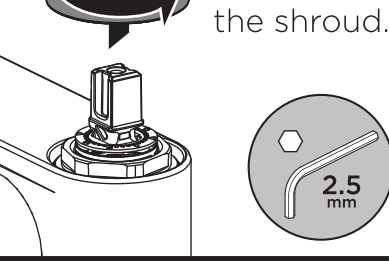

2.5 mm

2

Use a box spanner to remove the retaining nut.

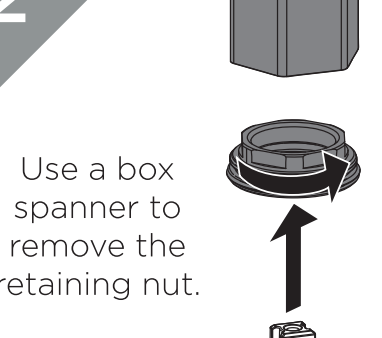


30 mm

3


Lift out the cartridge.

For replacement cartridges, see **SPARE PARTS**.

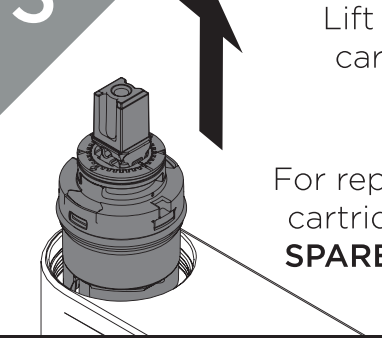

4


Reverse steps to replace the cartridge.

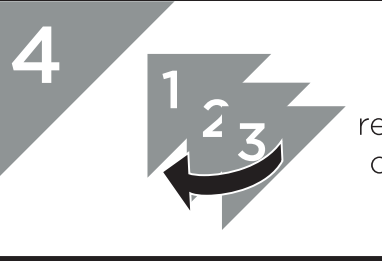

Waste Installation and Operation

1


Thread the washer onto the waste until it is sitting tightly under the lip.

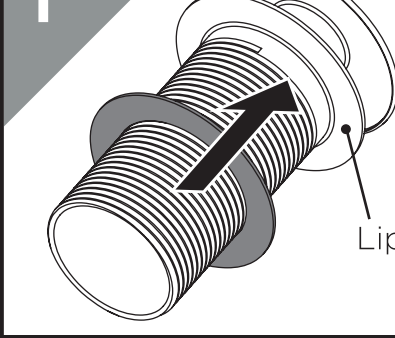

Lip

2


Push the waste into the hole until the other rim sits flush with the basin.

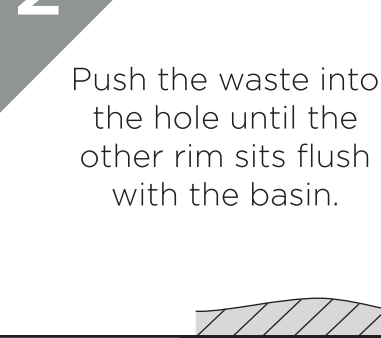

3

Slide the second washer along the exposed underside of the waste.

Then tighten the backnut to secure in place.

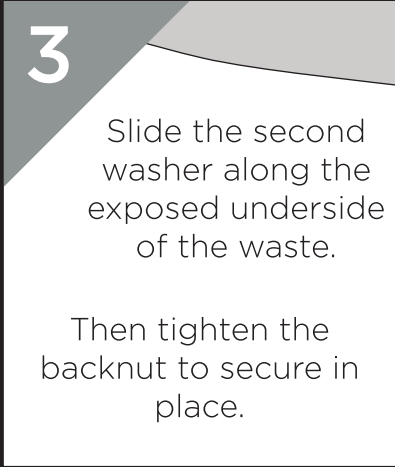


4

Push the centre down to close the waste.

Push again to open and release the contents of the basin.

Closed Open

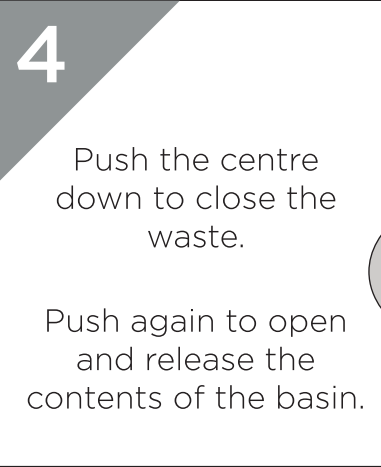


Your waste is now ready for use.

Outlet Cleaning

1


Insert a coin into the slot in the outlet and twist gently to remove.

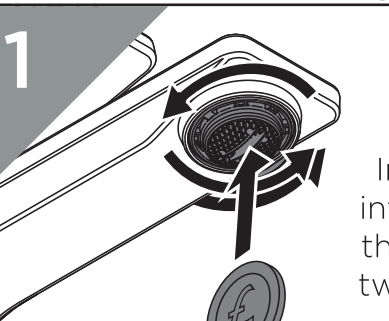


(Reverse to replace)

2

Check all loose parts for damage and then soak using a suitable solution to de-scale.

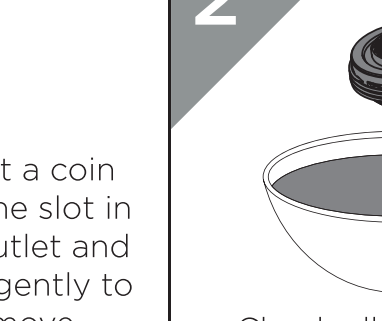

Spare Parts

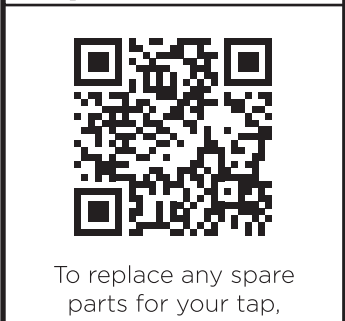

To replace any spare parts for your tap, scan the QR Code or visit www.bristan.com and search for your product.

General Cleaning

Bristan products are made from premium materials, with hand polished, electroplated, PVD or EPD finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Contact Us

Bristan Group Ltd.
A Masco Company

UK: Bristan Group,
Pooley Hall Drive,
Birch Coppice Business Park,
Dordon, Tamworth
B78 1SG.

EU: Masco Europe S.à.r.l.
14 Rue Strachen
6933 Mensdorf
Luxembourg

Email Us: enquire@bristan.com
Website: www.bristan.com
Call Us: +44330 026 6273

BRISTAN

Part of **BRISTAN GROUP**

Troubleshooting

Symptom	Cause	Remedy
Low Flow	Partially closed isolation valve.	Open isolation valve.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
	Partial blockage in the outlet	Remove to Clean and soak in suitable solution.
No hot water or cycling hot and cold	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
No Flow	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.
Temperatures not corresponding with taps	Inlet pipes have been connected incorrectly	Swap the inlet tails around.

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

Your guarantee starts from the purchase of your product, but you can still benefit from registering it for easier identification in the unlikely event of a manufacturing fault, please visit www.bristan.com/register

For any other queries, please call Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees

