

# BRISTAN

Traditional Exposed Bath Waste with Overflow

Installation Instructions & User Guide



IMPORTANT: Please keep these instructions for future reference and request of replacement parts

## Introduction


Thank you for choosing Bristan, the UK's leading taps and showers expert. We have designed this product with your enjoyment in mind. To ensure that it works to its full potential, it needs to be fitted correctly. These fitting instructions have been created to give you all of the information you need and, if you need any further help, please do not hesitate to give us a call on 0844 701 6273.

## Installation

1. Identify all components are present prior to installation.
2. Remove screw (2) from flange (3), then remove the flange (3) from the waste body (6).
3. Secure the waste body (6) against the underneath of the bath with the sealing washer (5) in position. Use the flange (3) with the rubber washer (4) between the flange and the bath, securing the assembly with a screw (2).
4. It is recommended that a silicone sealant be applied to all sealing faces of the washer (4).
5. Replace screw (2). Do not over tighten.
6. Use the conical washer (7) and nut (8) in the order shown to hold the tube (9) into the waste body (6).
7. Use the same process to assemble the overflow elbow (10) to the tube (9).
8. Secure the overflow elbow (10) to the bath using the sealing washer (11) and the overflow washer (12), positioned either side of the bath surface. Then place the overflow (13) on top of the overflow washer (12) and secure the assembly using screw (14).
9. It is recommended that a silicone sealant be applied to both sealing faces of washer (12).
10. Tighten screw (14). Do not overtighten.
11. Check all joints and connections for leaks.
12. See over page for after care instructions.

## Components

1. Plug
2. Screw
3. Flange
4. Rubber Washer
5. Sealing Washer
6. Waste Body
7. Conical Washer
8. Nut
9. Chrome Tube
10. Overflow Elbow
11. Overflow Seal Washer
12. Overflow
13. Overflow
14. Fixing Screw

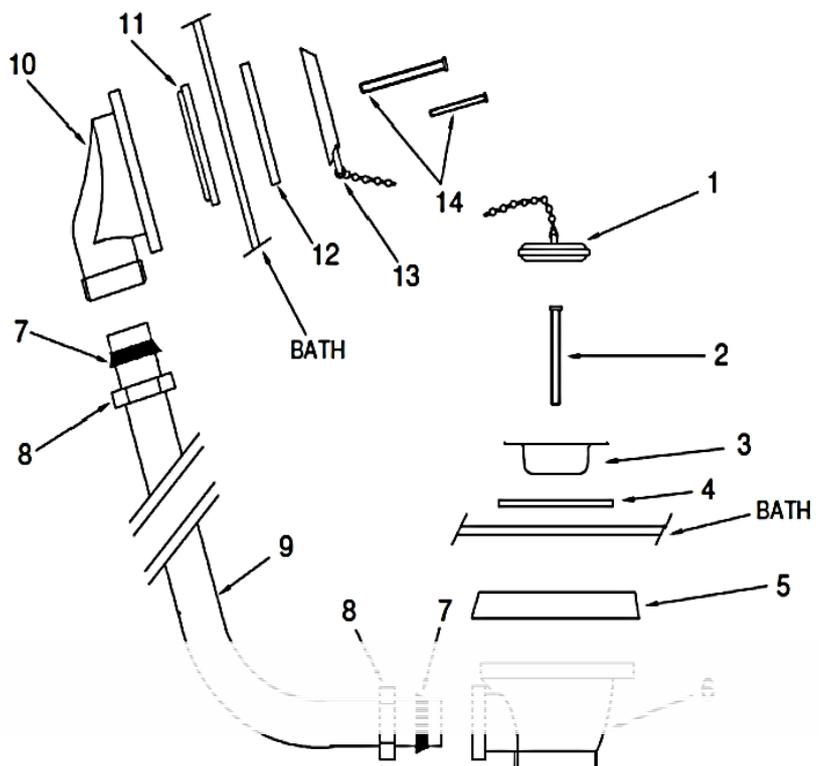

---

# BRISTAN

---

Notes:

# BRISTAN

This booklet covers product code

W BATH08 C

W BATH08 G

Helpline  
0330 026 6273

Bristan Group Limited

Birch Coppice Business Park, Dordon, Tamworth, Staffordshire B78  
1SG

A Masco Company

Website:

[www.bristan.com](http://www.bristan.com)

Telephone: 0330 026 6273

Email: [enquire@bristan.com](mailto:enquire@bristan.com)

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee, simply scan the QR code and Register your product.

Alternatively, visit [www.bristan.com/register](http://www.bristan.com/register) to register your product via a computer.

For full guarantee terms and conditions visit, [www.bristan.com/guarantees](http://www.bristan.com/guarantees)



*We Know & We Care*