

BRISTAN


Installation Instructions & User Guide

Please leave these instructions
with the end user

Product Code: VAL2 BIB C CD (D2)

Specifications

Inlet Water Temperature


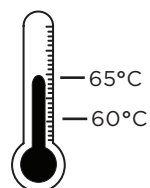


60-65°C Recommended

Dynamic Water Pressure


Min: 0.2 bar

Max: 5.0 bar

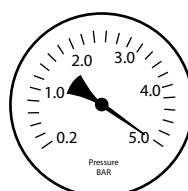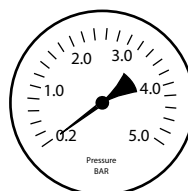


Maximum Static Pressure: 10.0 bar

Inlet Connections

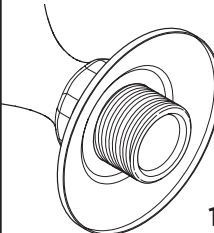

1/2" BSP

Tools You'll Need

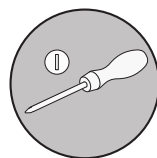


Flat Head
Screwdriver




Crosshead
Screwdriver



Adjustable
Spanner

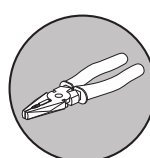

Long-Nosed
Pliers

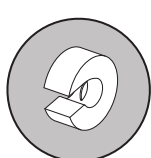


Pipe Cutter



Drill



Pencil

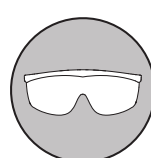

Safety
Goggles

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of the Water Supply (Water Fittings) Regulations 1999 and current by-laws. For full Installation Requirements & Notes (IRN) please visit www.wras.co.uk/directory.

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

If power tools are used do not forget to:


- Wear eye protection
- Unplug equipment after use

This product must not be modified in any way as this will invalidate the guarantee.

If in doubt, contact a registered plumber, your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows:-

The Institute of Plumbing,
64 Station Lane,
Hornchurch,
Essex,
RM12 6NB, Tel: 01708 472791

Pack Contents

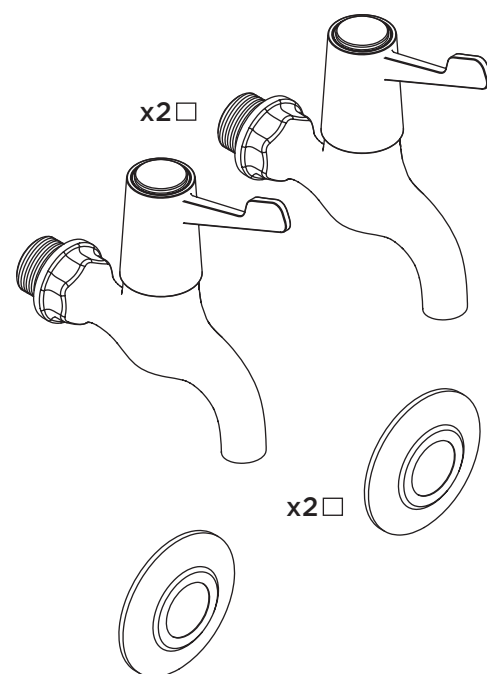

Spare Parts


To replace any spare parts
for your tap, why not
scan the QR Code or
visit www.bristan.com
and search for your product.



Installation

1

Create the rear
access point
in the back of
the wall cavity.

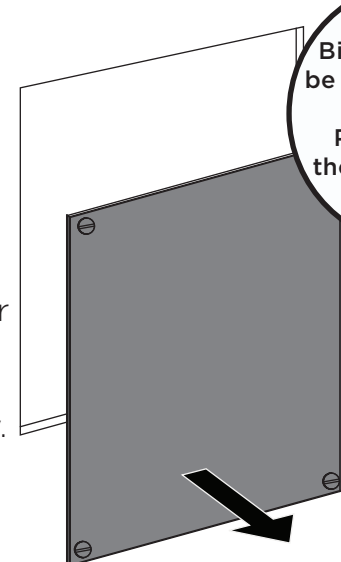

IMPORTANT
Bib taps can also
be fitted to X US C.

Please refer to
those instructions
if being used.

2


Identify the required position of the taps and
prepare the water supply pipes.

Mark and drill holes. Finish the wall surface.

REMEMBER
Hot on the left,
cold on the right!


3

Screw the shrouds on
to the tap bodies.

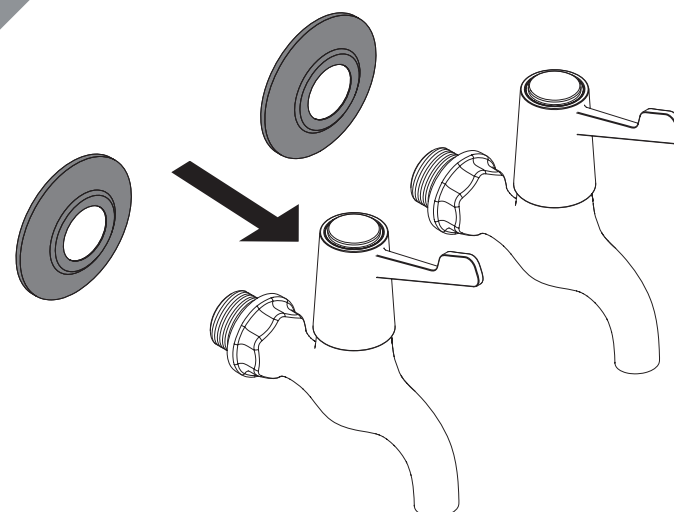


4

Feed the tap bodies through the wall.
Secure using a suitable washer
and sealant (not supplied).

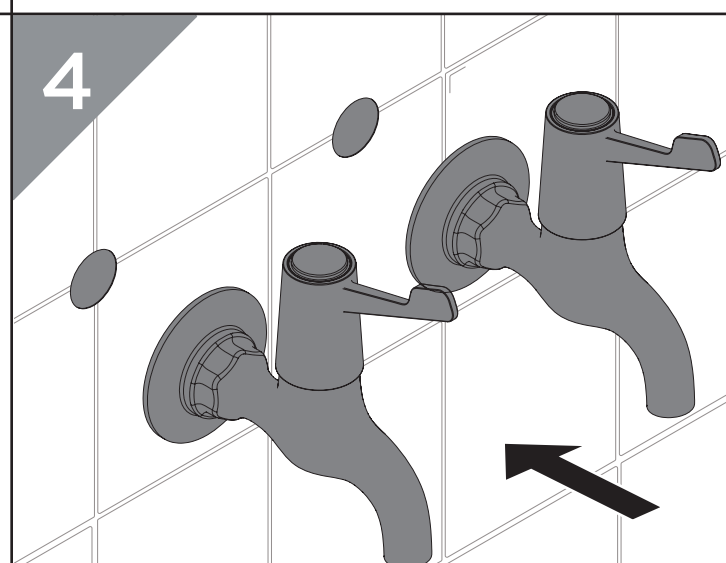



5

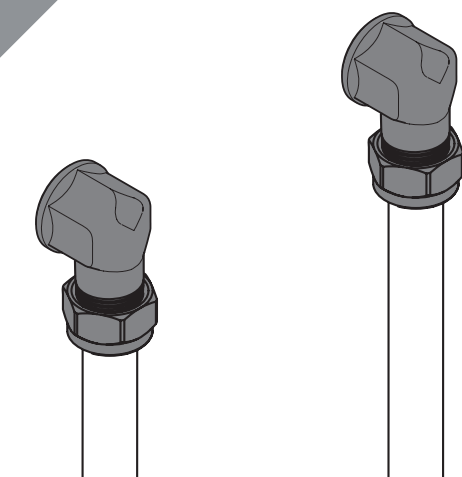

Connect the hot and cold water
supplies to the threaded tails.
We recommend using elbows
(not supplied).

Turn on the water supply
and check all joints and
connections for leaks.

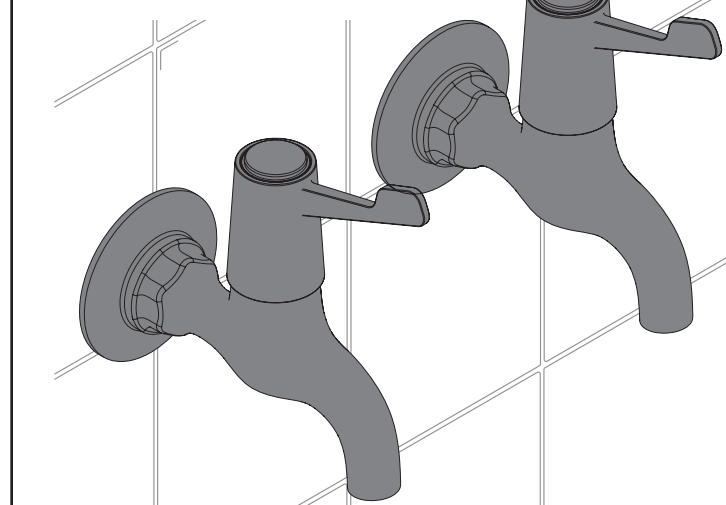

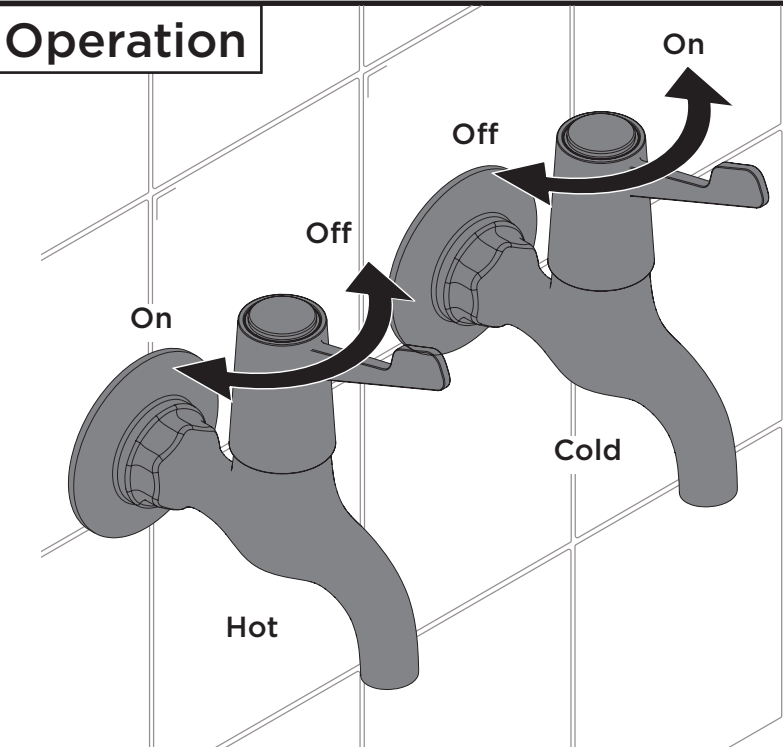

Operation

General Cleaning

Bristan products are made from premium materials, with hand polished, electroplated, PVD or EPD finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Spare Parts





To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.


Troubleshooting

Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
Water dripping from taps	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
Taps do not turn on	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
	Closed isolation valve.	Open isolation valve.
Taps do not turn on	Mains water supply turned off.	Turn on mains water supply.

Maintenance - Replacing Valves

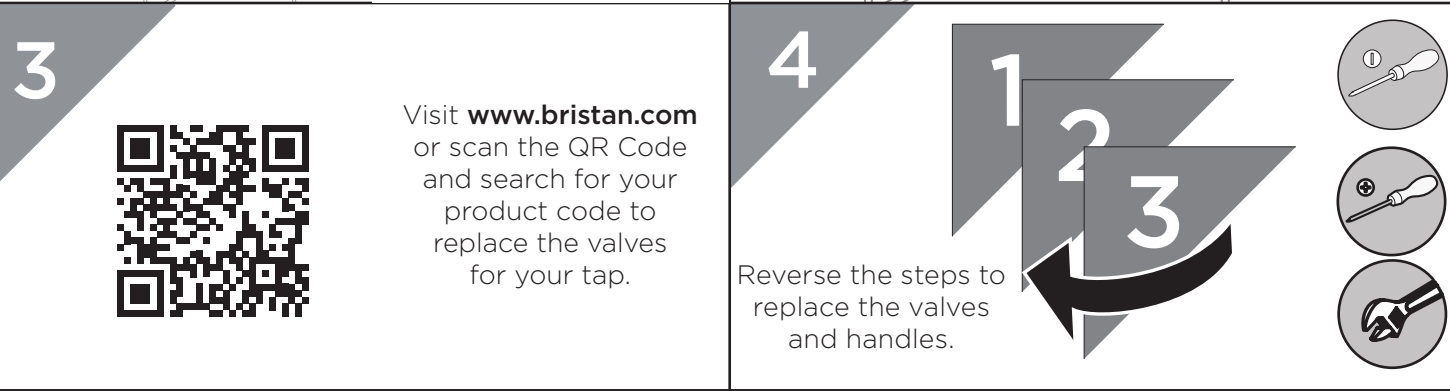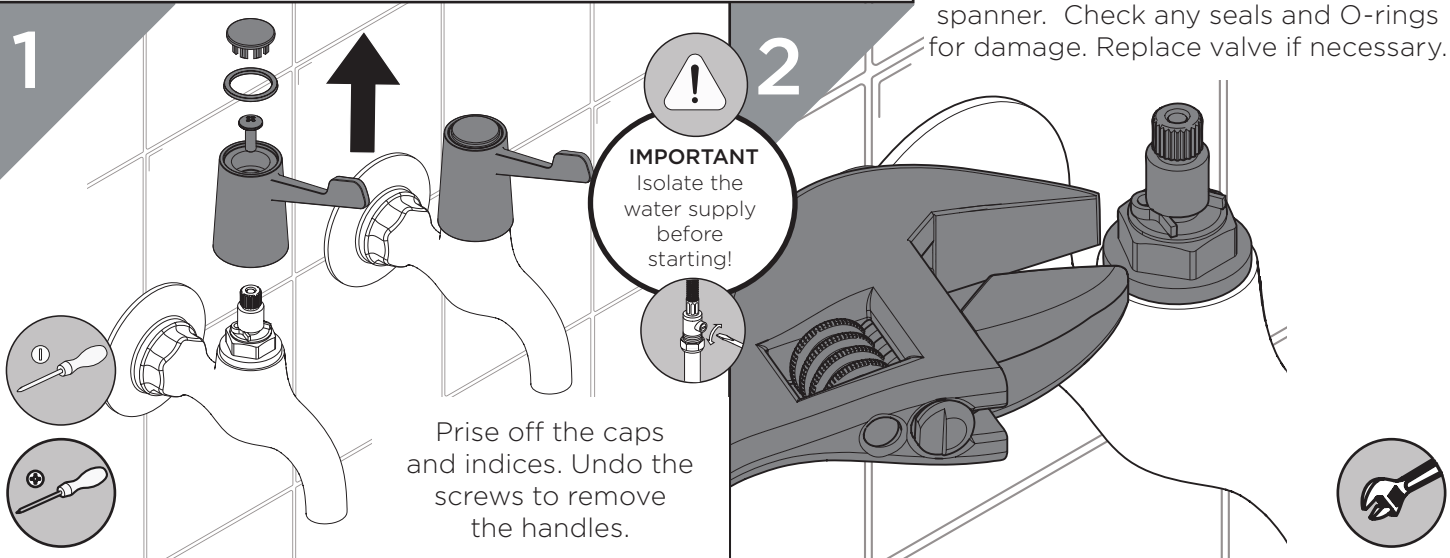

Maintenance - Clean/Replace Outlet

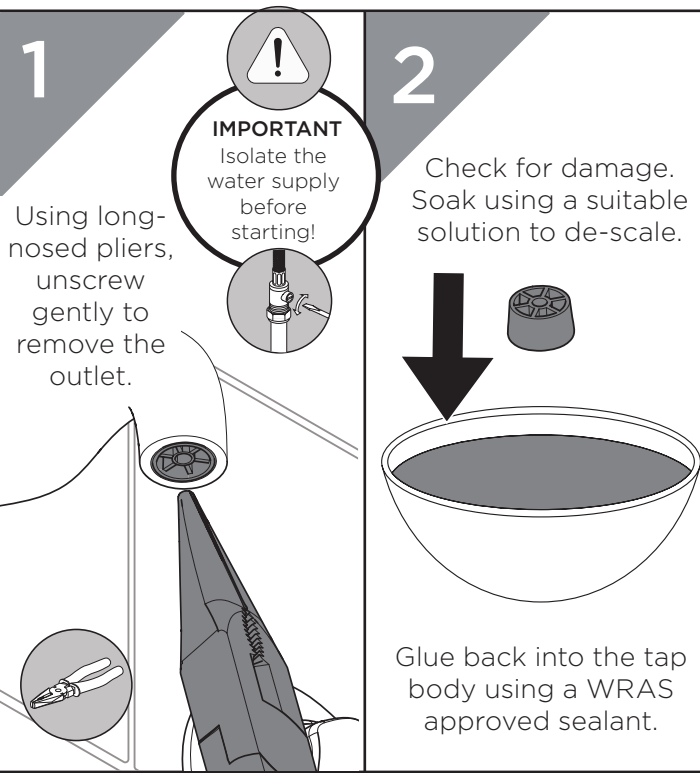

Contact Us

BRISTAN

Bristan Group Ltd.

UK: Bristan Group, B78 1SG.
EU: Masco Europe S.à.r.l.
14 Rue Strachen
6933 Mensdorf
Luxembourg

Customer Service: +44330 026 6273
Web: www.bristan.com
Email: enquire@bristan.com

A Masco Company

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.

