

# BRISTAN

Round Push Button Bath Waste Slotted Chrome

Installation Instructions & User Guide



IMPORTANT: Please keep these instructions for future reference and request of replacement parts

## Introduction


Thank you for choosing Bristan, the UK's leading taps and showers expert. We have designed this product with your enjoyment in mind. To ensure that it works to its full potential, it needs to be fitted correctly. These fitting instructions have been created to give you all of the information you need and, if you need any further help, please do not hesitate to give us a call on 0330 026 6273.

## Installation

1. Identify all components are present prior to installation.
2. Fit the waste body and one of the rubber washers (4) into the bath.
3. Place a second rubber washer (2) under the bath above the banjo (3), and secure using the back nut (1) making sure the remaining washer (2) is between the backnut and the banjo. Use a pure Silicon sealant to seal washer to prevent leaking.
4. Fit the overflow outlet parts (16, 15 & 14) to the bath using spacer (17) depending on the thickness of the bath. Use a pure Silicon sealant where necessary.
5. Connect the overflow elbow (18) to the banjo fitting (3) using the flexible tube (13).
6. In order to fill the bath, the button in the middle of the waste needs to be pressed down. To release water, press button again.
7. Check all joints and connections for leaks.
8. See over the page for aftercare instructions.

## Components

1. Back nut	x1
2. Rubber Washer	x2
3. Banjo	x1
4. Silicone Washer	x1
5. Waste Flange	x1
6. Mechanism Base	x1
7. Small Cap	x1
8. Big Cap	x1
9. Sealing Washer	x1
10. Clicker Mechanism	x1
11. O Ring	x1
12. O Ring	x1
13. Plastic Tube	x1
14. Overflow Cap	x1
15. Rubber Washer	x1
16. Foam Washer	x1
17. Plastic Washer	x1
18. Overflow Elbow	x1

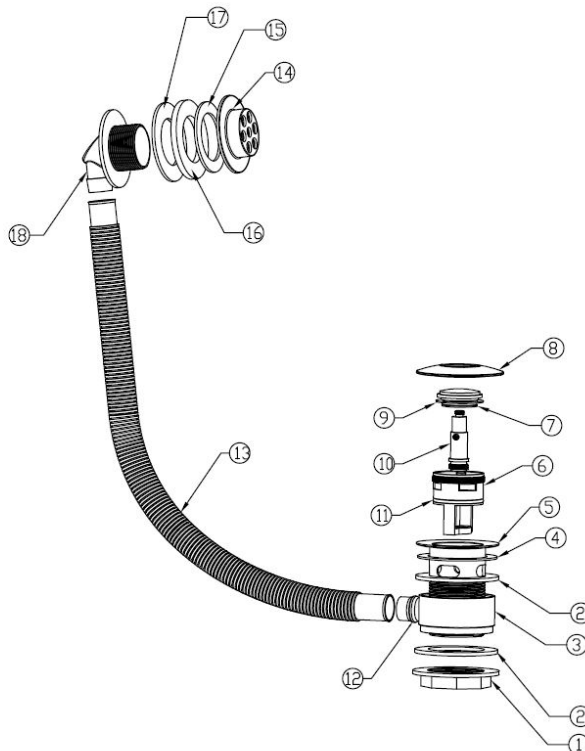

---

# BRISTAN

---

Notes:

# BRISTAN

This booklet covers product code:

W BATH05 C

Helpline  
0330 026 6273

Bristan Group Limited  
Birch Coppice Business Park, Dordon, Tamworth, Staffordshire B78  
1SG

A Masco Company

Website:

[www.bristan.com](http://www.bristan.com)

Telephone: 0330 026 6273

Email: [enquire@bristan.com](mailto:enquire@bristan.com)

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee, simply scan the QR code and Register your product.

Alternatively, visit [www.bristan.com/register](http://www.bristan.com/register) to register your product via a computer.

For full guarantee terms and conditions visit, [www.bristan.com/guarantees](http://www.bristan.com/guarantees)



*We Know & We Care*