

BRISTAN

TAPS & SHOWERS


Installation Instructions & User Guide

Please leave these instructions with the end user

Product code: IRS BSM C (D1)

Specifications


Inlet Water Temperature

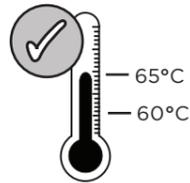

60-65°C recommended


Dynamic Water Pressure

Min: 0.2 bar Max: 5.0 bar

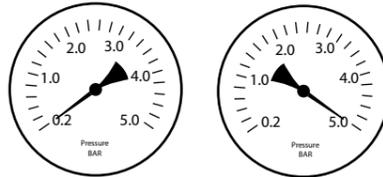


Maximum Static Pressure: 10.0 bar

Inlet Connections

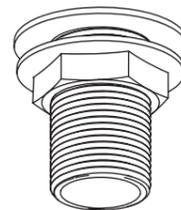

3/4" BSP

Tools You'll Need

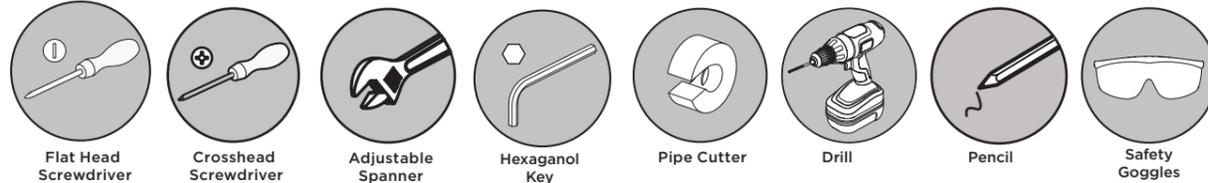

Prior to Installation

All products manufactured and supplied by Bristan are safe provided they are installed, used correctly and receive regular maintenance in accordance with these instructions.

This product has been tested to the Water Regulations Advisory Scheme (WRAS) and satisfies the requirements of the Water Supply (Water Fittings) Regulations 1999 and current bylaws. For full Installation Requirements & Notes (IRN) please visit wras.co.uk/directory.

We recommend isolation valves to be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing these taps the water supply must be thoroughly flushed in order to remove any swarf, solder etc.


This product must not be modified in any way as this will invalidate the guarantee.

Full access must be made available for future maintenance/servicing purposes.

If in doubt, contact a registered plumber or your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows:-

The Institute of Plumbing,
64 Station Lane,
Hornchurch,
Essex,
RM12 6NB, Tel: 01708 472791

Pack Contents

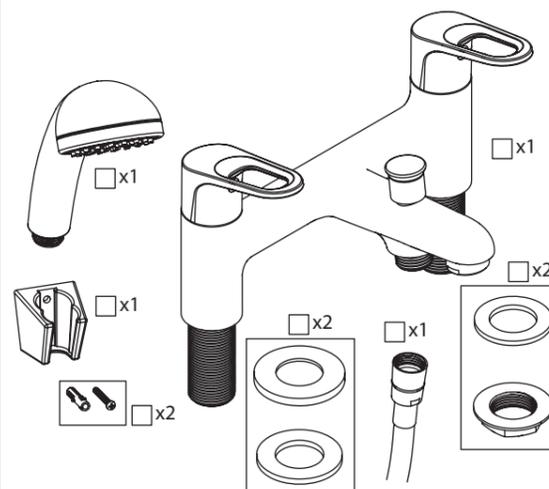


Spare Parts

To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.



Installation

1

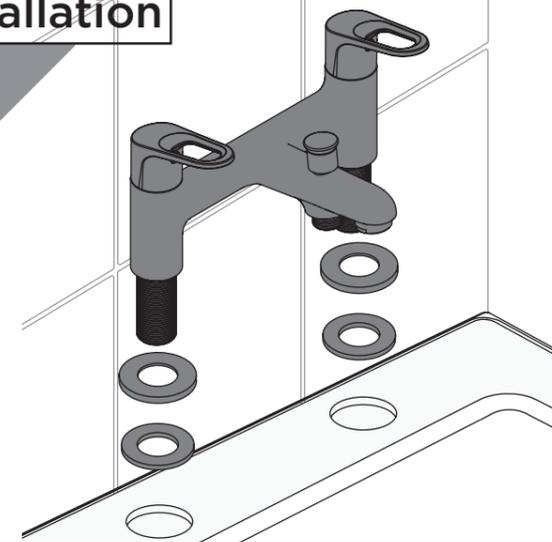


Fit the tap to the bath, ensuring the plinths are in place.

2




REMEMBER
Hot on the left, cold on the right!

Secure the taps to the bath by using the washer and metal backnut below the bath.

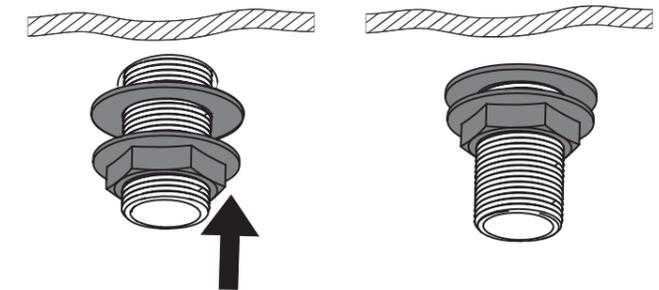


3

Connect the hot and cold water supplies to the threaded tails.

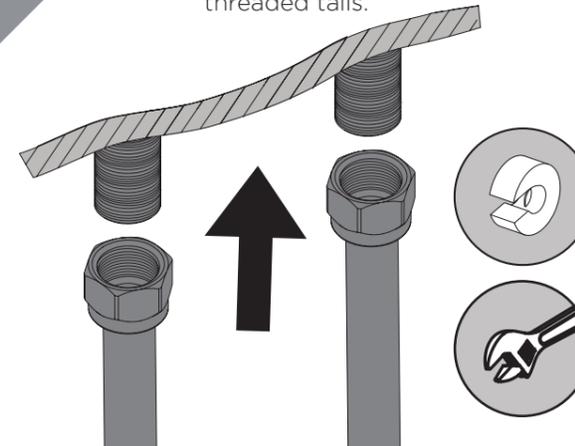


4

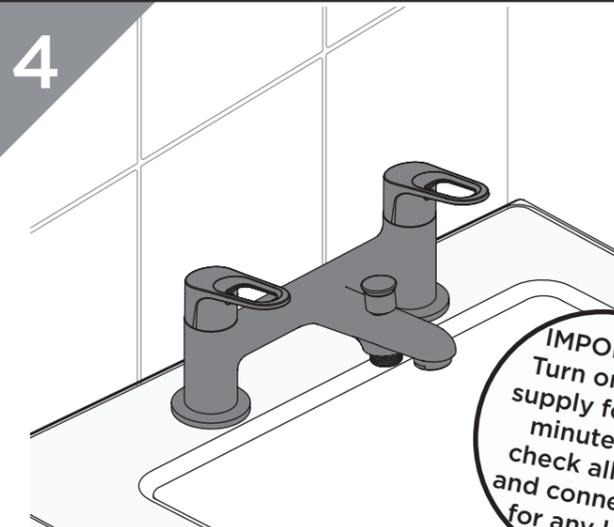

IMPORTANT
Turn on water supply for a few minutes and check all joints and connections for any leaks


Hose Connection

1

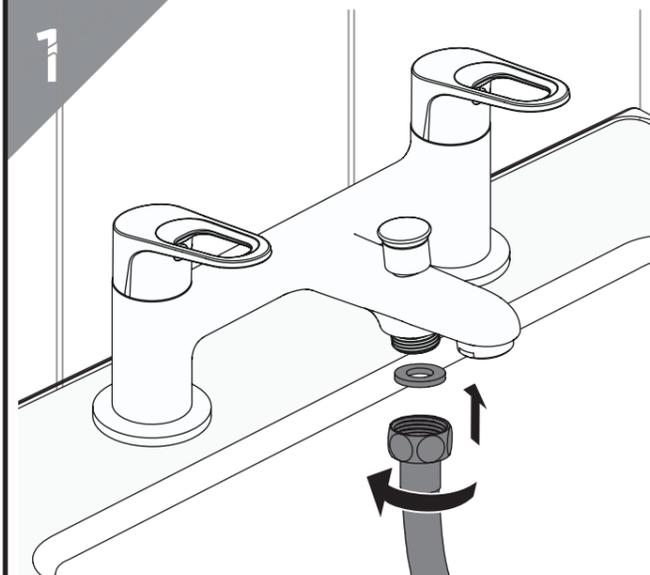

Secure nut end of hose onto the threaded outlet connection, ensuring the washer is in place before securing

2

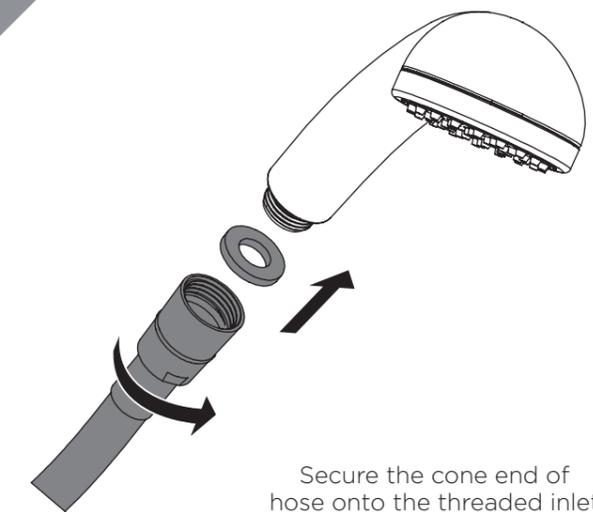

Secure the cone end of hose onto the threaded inlet connection of the handset, ensuring the washer is in place, before tightening

Installation - Wall Bracket

1

Position the wall bracket where you want it and mark out where to drill

2


Drill holes and fit rawl plugs, then secure wall bracket to wall using screws provided

IMPORTANT
Prior to drilling into walls check there are no hidden electrical wires, cables or water supply pipes

3

Check handset sits securely on the wall bracket and there is no movement

Operation

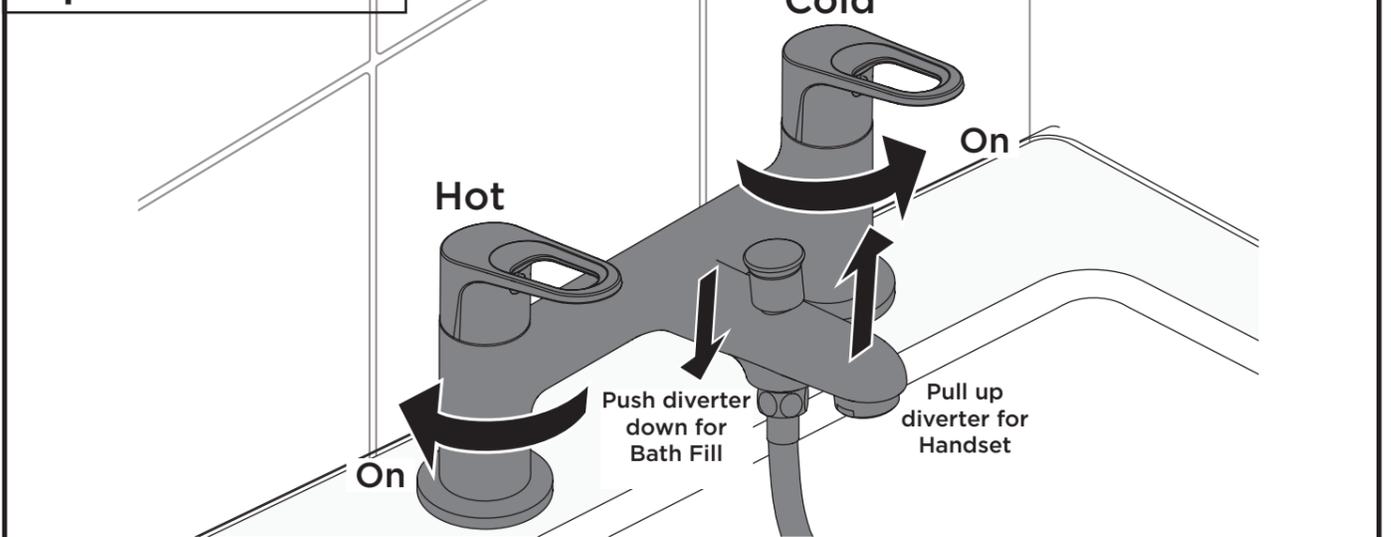

Maintenance - Clean/Replace Outlet

1

Unscrew outlet with an adjustable spanner and remove to clean

2

Place flow straightener parts in suitable solution and soak until fully de-scaled

Screw back into the tap body to replace the outlet.

Maintenance - Valve Cleaning

1

Remove cap and loosen the handle grub screws. Remove handles

2

Unscrew the valve using an adjustable spanner. Check any seals and O-rings for damage. Replace valve if necessary.

IMPORTANT
Isolate the water supply before starting!

3

Place valves in a suitable solution and soak until fully de-scaled.

4

Reverse the steps to replace the valves and handles.

Troubleshooting

Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.



We Know & We Care